

X3000

User Manual



Table of Contents

Safety & Precautions	4
Part I Product Set-ups	6
1.1 Scope of Delivery	6
1.2 X3000 Overview	7
1.3 Battery Charging	8
1.4 Basic Installation/Handling & Care	9
1.4.1 Base Unit & Tube Unit Installation	9
1.4.2 Battery Unit Installation	10
1.4.3 Camera tip optical	11
1.4.4 Handling & Care	11
1.5 I/O Ports Connection	12
1.5.1 SD card installation	12
1.6 Shoulder Strap	13
1.7 Use the Probe Stand with a tripod	13
1.7.1 Use the Probe Stand with a mono-pod	14
1.7.2 Rigid Sleeve	18
1.8 Function Buttons/Multi-function Control	19
1.8.1 Function Buttons 1 & 2	19
1.8.2 Custom Hotkey	19
1.8.3 Trigger button/Snapshot & Recording video	20
1.9 Articulation Joystick/Articulation Lock Switch	21
Part II On Screen Display (OSD) functions	22
2.1 Live View screen UI	22
2.2 Function list	22
2.2.1 3D measurement	23
2.2.2 Gallery	24
2.2.3 Settings	30
2.2.4 Info.	34
2.2.5 Set File Preference	36
2.3 AE control	39
2.4 Advanced Functions	40
2.4.1 Brightness Control	40
2.4.2 Image fine tune	41
2.4.3 White Balance	42

2.4.4	WDR	43
2.4.5	NEGATIVE	43
2.4.6	COMPARE	44
2.4.7	COMPARE	45
2.4.8	ROTATION	47
2.4.9	WATERMARK	48
2.4.10	DATE	49
2.4.11	MICROPHONE	49
2.4.12	BLADE COUNTER	50
2.5	Full screen	53
2.6	Switch camera (view angle)	53
2.7	Manual Exposure	54
2.8	Control X3000 on PCs	54
Part III Measurement Functions		55
Overview of 3D-measurement system		55
3.1	Capture a 3D image	55
3.2	Measurement Functions	60
3.2.1	Point-to- Point (Length)	61
3.2.2	Point-to-Line (Distance)	62
3.2.3	Point-to-Plane (Depth)	63
3.2.4	Multiple-point-Area	64
3.2.5	Two-lines-angle (Protractor)	65
3.2.6	Reference Plane	66
3.2.7	Radius Gauge	68
3.3	Calibration and Error rate	69
Specifications		71

Safety & Precautions

Safety Conformances

CE NOTICE

The Video scope System is in conformance with the following standards:
2014/30/EU Electromagnetic Compatibility Directive.

RoHS NOTICE

The Video scope System is in conformance with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive. This means that our product is both lead-free and without the hazardous substances either in the manufacturing process or in the final product.

FCC NOTICE

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

USER MUST PAY ATTENTION TO THE INFORMATION PROVIDED HERE TO ENSURE SAFETY.

We suggest you read the following statements carefully before using the system.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of [HYPERLINK "http://www.fcc.gov"](http://www.fcc.gov) after searching on FCC ID: 2AA5FX3000

SAFETY GUIDE

USER MUST PAY ATTENTION TO THE INFORMATION PROVIDED HERE TO ENSURE SAFETY.

We suggest you read the following statements carefully before using the system.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

If this product is used without observing the information given under this symbol, it might cause injuries or loss of life.

If this product is used without observing the information given under this symbol, it might cause damage to this product.

WARNING HAZARDOUS ENVIRONMENTS

Do not use this system in explosive environments such as gasoline or alcohol storage tanks.

WARNING FLAMMABLE GASES

Do not use this system near flammable gases.

CAUTION INDUSTRIAL USAGE ONLY

CAUTION INTENSIVE LIGHT MAY CAUSE EYE INJURY

Avoid looking at the probe head while LED is on.

CAUTION CERTAIN SUBSTANCES MAY DAMAGE THE PROBE

Please refer to the list of chemical resistances below. Contact the store of purchase for further information on other chemicals or unsure chemical solutions.

Chemical Resistance: Water / Brake fluid / Gasoline / Diesel fuel / Transmission fluid

WARNING - Thermal Pad High Temperature

- This product equipped with two heat sinks behind the monitor unit and the handle grip which dissipate heat among 40°C~50°C under normal operation.
- When the probe's illumination keep output at maximum level over 20 minutes, the temperature may raise at 63°C.

CAUTION - Changing Probes / Base Unit

- MUST follow the "1.4 Basic Installation" instructions in the manual and use proper tools to complete the concerned operations.

CAUTION - Battery

- MUST use the original accessory charging units. Do not try using any other electronic charger or recharging method for the batteries.

CAUTION - Media Files Compatibility

- The media files captured and saved by the X3000 system, including photos and videos, are not compatible with any other Mitcorp product.
- The X3000 system cannot read media files from any other Mitcorp product.

Part I Product Set-ups

1.1 Scope of Delivery



1 Trolley Case

2 Rigid Sleeve Set

3 Swappable Battery

4 Base unit

5 Probe unit

6 Calibration Block

For re-calibration of the 3D measurement probe (stored under the probe unit)

7 Neck Strap

8 HDMI cable

9 Type-C cable



10 USB Type-C Power Adapter



11 Probe clamp plug

This plug is aim for fixing the probe operation when insert hole diameter from 20~25 mm.



12 Monopod



13 Cleaning set



14 SD Card



15 Centering Device

Three sizes of centering device included.



X3000 videoscope dimensions




1.2 X3000 Overview



• Physical parts:

No.	Item	No.	Item
1	Function Buttons	9	Probe Stand
2	Trigger Button	10	I/O Ports
3	Articulation Joystick	11	Power Button
4	Articulation Lock Switch	12	Ergonomic Handgrip
5	Battery (Detachable)	13	Tube Strain Relief
6	Base Unit	14	1/4" Tripod Screw Hole
7	Base Unit Connector	15	Microphone
8	Shoulder Strap Handle	16	Heat sink

1.3 Battery Charging

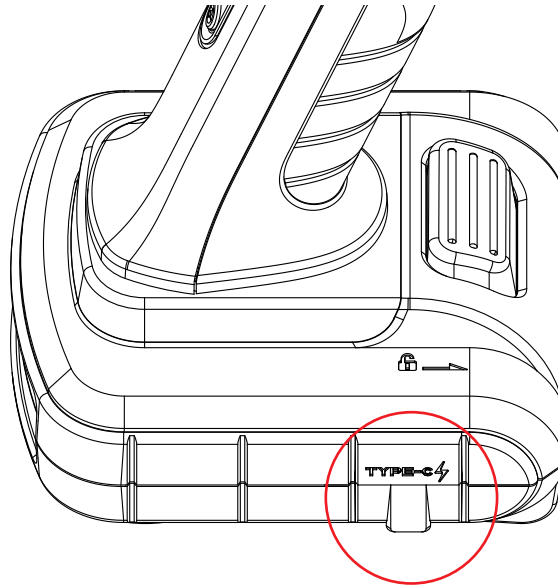

1. The charging operation is only allowed via the battery's charging USB type-C port.
2. Recommend to use the original equipped adaptor to charge the battery. Any other adaptor could cause unexpected damage.
3. The battery pack is conform to the PD protocol (USB Power Delivery) which allows user to charge via PD-45W(15V-3A) compatible sources, including power banks as for USB cables.
4. When charge under system power on, the power consumption under hard use (such as frequently 3D computing or long time high output of the illumination) may cause low charging efficiency and high electrical heat.
5. Please charge the battery before using for the first time.
6. Green light: Full; Red light: recharging.


General specification

- Nominal Voltage: 7.26V
- Capacity: 8680mAh
- Maximum discharge current: 5.00A
- Maximum charge current: 2.00A
- Operation temperature: 5-45°C (Charge status)
- Operation temperature: -15-55°C (Discharge status)
- Storage temperature: -20-60°C (less than 1 month)
- Storage temperature: -20-45°C (less than 3 month)
- Storage temperature: -20-23°C (less than 12 month)


1.4 Basic Installation/Handling & Care

1.4.1 Base Unit & Probe Unit Installation

1. Remove the protection cover and check the alignment holes, USB-C and pogo-pins connectors are clean.

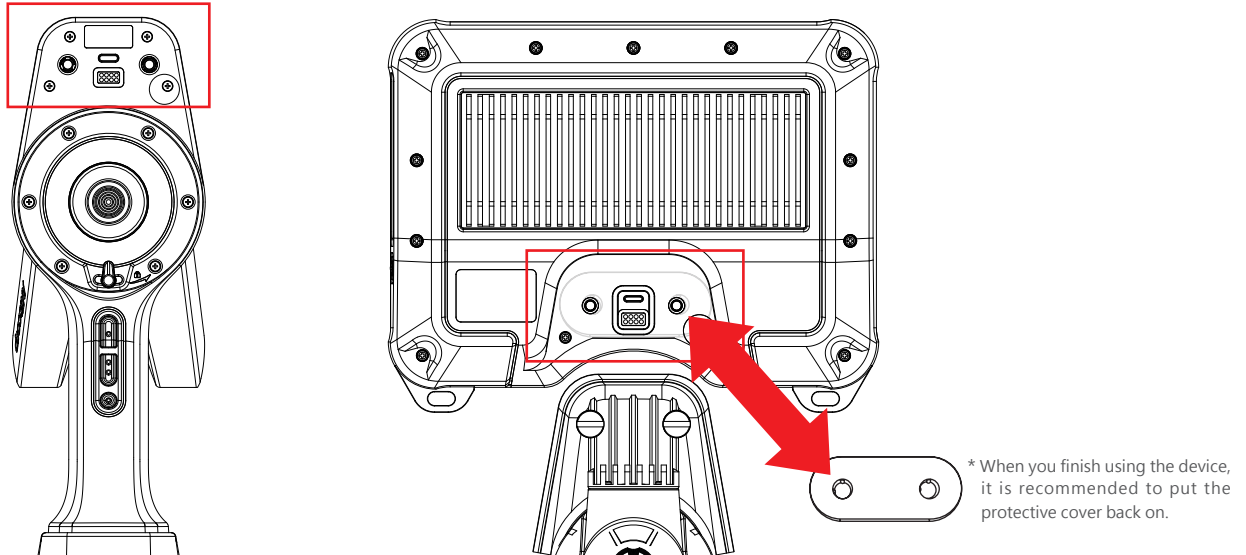


2. Place the base unit on the probe as below picture.
Fasten the hand screw when the parts are properly aligned. Normally it do not need any tools to operate it.

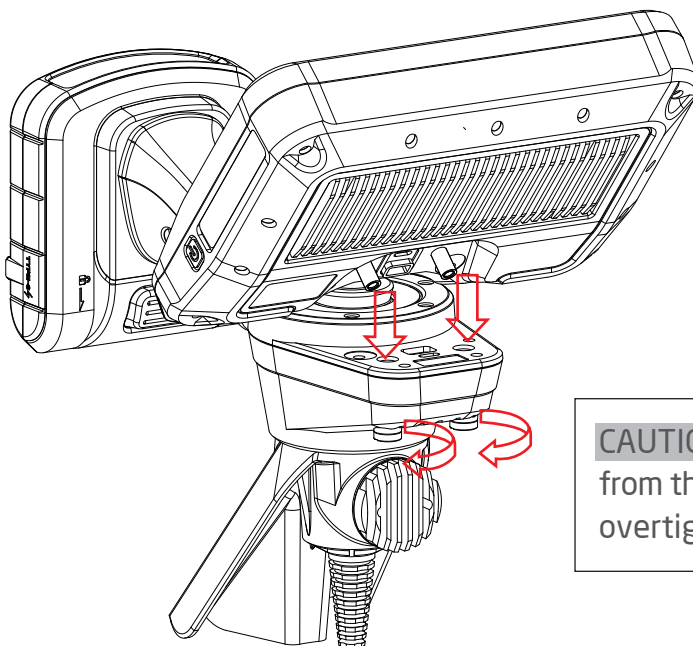


CAUTION - 'DO NOT' remove the screw from the probe stand. Be careful to not overtighten the screw.

1.4.2 Battery Unit Installation

1. To remove the battery, push and hold the lock button, then pull the battery smoothly.

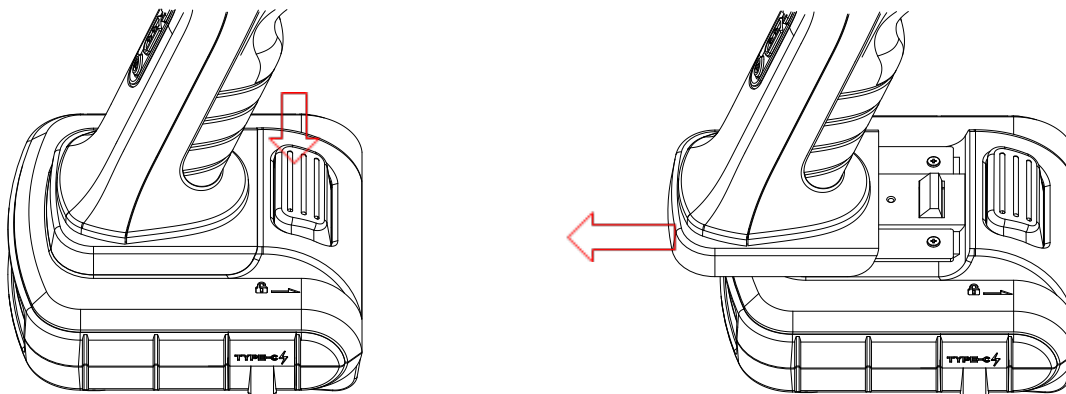

2. To install the battery, reverse the operation direction, properly align the orbit and slide the battery in till the lock latch 'click'.

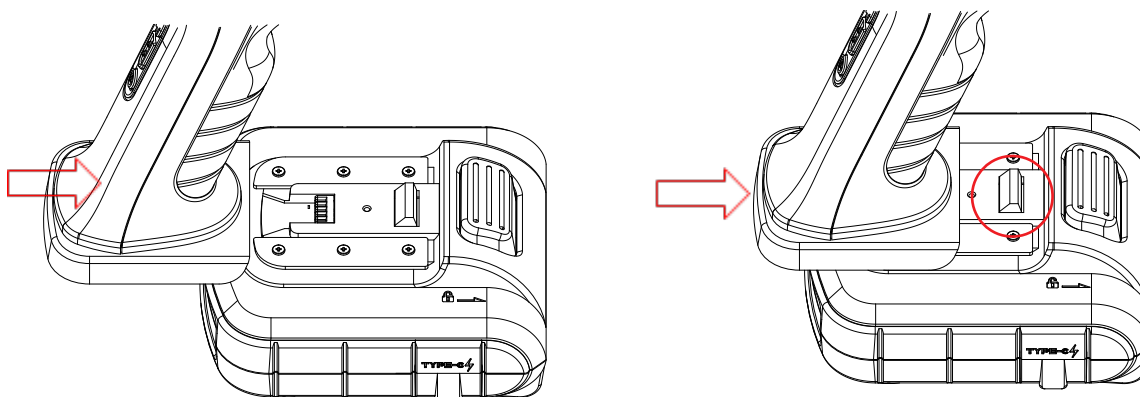


1.4.3 Camera tip optical



The tip end contains two pairs of Micro projector/Camera lens/LED light on the front view (0°) and the side view (90°) directions.

WARNING:

- The camera tip is designed to against 100°C.
- When the camera's temperature is over 60°C, the monitor will pop-up a high temperature bar for caution(as the illustration below).
- When the temperature is over 105°C (red section bar), the monitor will pop-up a overheat warning for caution (as the illustration below), strong recommend to withdraw the camera probe to get camera from damage.
- When the temperature is over 110°C, the system will turning off in a few seconds.
- For the design structure of side LED light, when the brightness output is over 50%, the thermal effect will lead the high temperature warning shows on quicker.

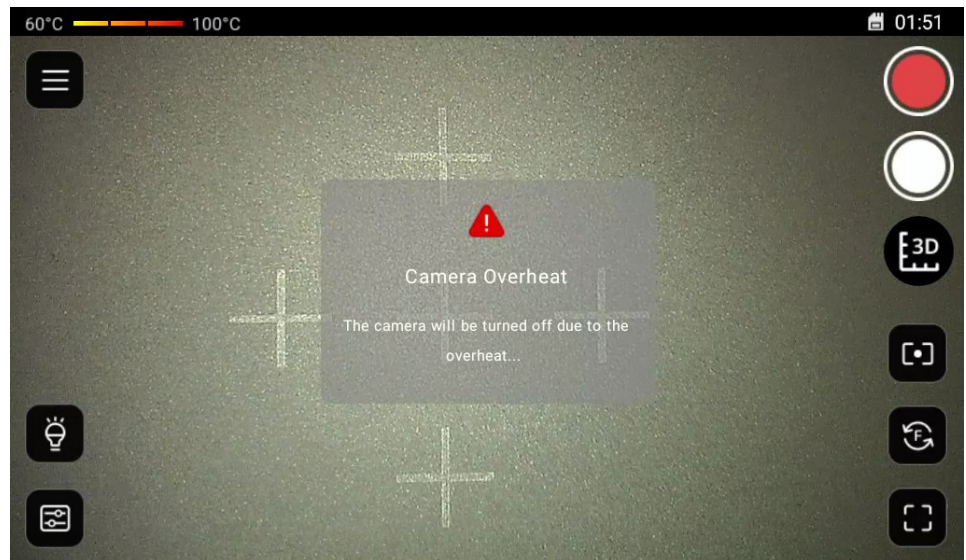


1.4.4 Handling & Care

CAUTION:

1. Always store the insertion probes, the base unit and the batteries properly.
2. Do not roll the probes up too tightly (aim for a diameter of at least 30 cm).
3. Check the outlook of all optical parts no broken and confirm there are no aliens cover them.
4. Use neutral detergent to clean the optical part if necessary.

1.5 I/O Ports Connection

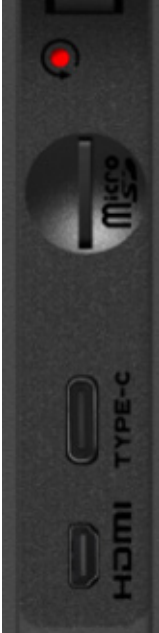
	Reset	Stab with a blunt pin when the system accidentally crashes.
	Micro SD	Push-push type micro SD card slot. Install the SD card by connecting the finger side up. When covering the outside robber cover, please avoid hard push to this position. Just push stoppers around the cover.
	USB Type-C	→ Use the accessory or compatible USB cable. Caution: This USB port is only for data transmission. 'DO NOT' input any power via this port.
	HDMI Type-D	→ Use the accessory or compatible HDMI cable. → The system can output the live view and saved images when connecting to monitors / TVs.

1.5.1 SD card installation

Please properly install the SD card before boot-up the system. The system DO NOT support SD card hot-swap operation.

The system will auto power off in a few seconds when it detect there is no SD card.

Every time change to a new (or another) card, do the format operation again is recommended.

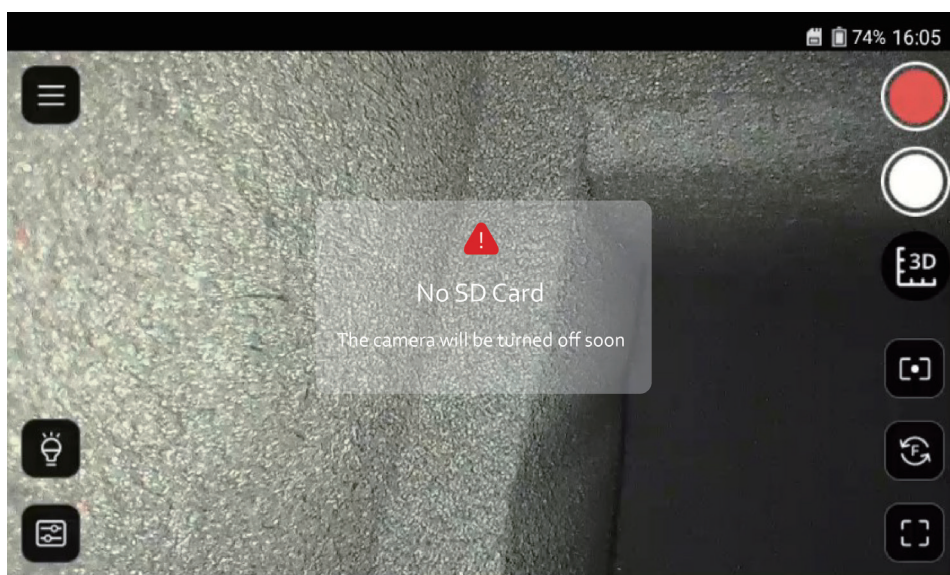

1.6 Shoulder Strap Hanging Ring



Take the shoulder strap out from the accessory box. Hook on the two hanging rings on the monitor. Adjust the proper length to fit your usage purpose.



1.7 Use the Probe Stand with a tripod


The stand equipped with a standard 1/4" screw hole which compatible with most tripod head. Recommend choosing high load capacity type to implement the operation.



ps. The tripod is NOT included in accessory. Just for illustration.


1.7.1 Use the Probe Stand with a monopod

- Monopod

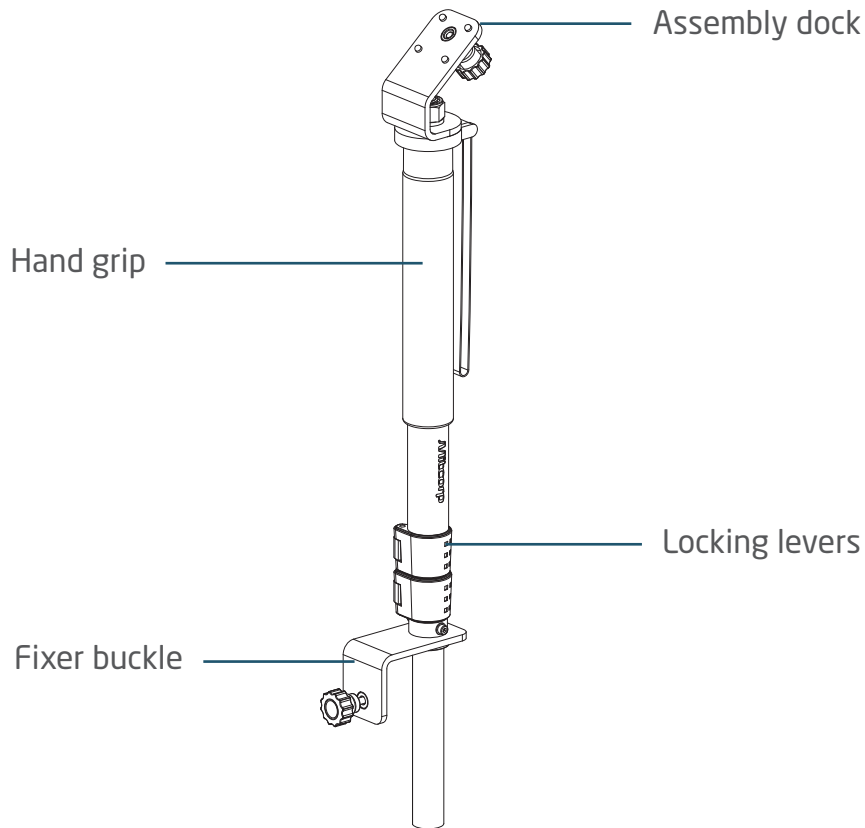


- Monopod


1. Take out the monitor unit and find the assembly hole on the bottom of the EVA. Take out the monopod from the carry bag.
2. Insert the pole into the assembly hole and make sure the fixer buckle is properly aligned to the trolley case's wall side. Then fasten the hand screw until the pole fixed well.

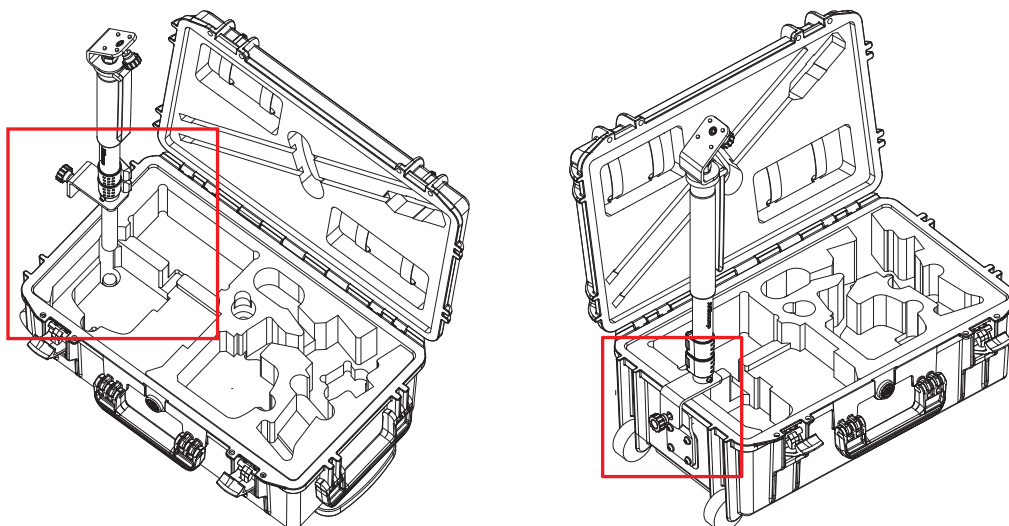


3. Take out the probe joystick unit. Carefully align the tripod screw hole onto the assembly dock of the mono stand. Note that there are positioning pins on the side and middle of the dock that helps to ensure the stability and ease of alignment of the parts. Fasten the hand screw of the stand onto the tripod screw hole after the parts are all confidentially assembled.

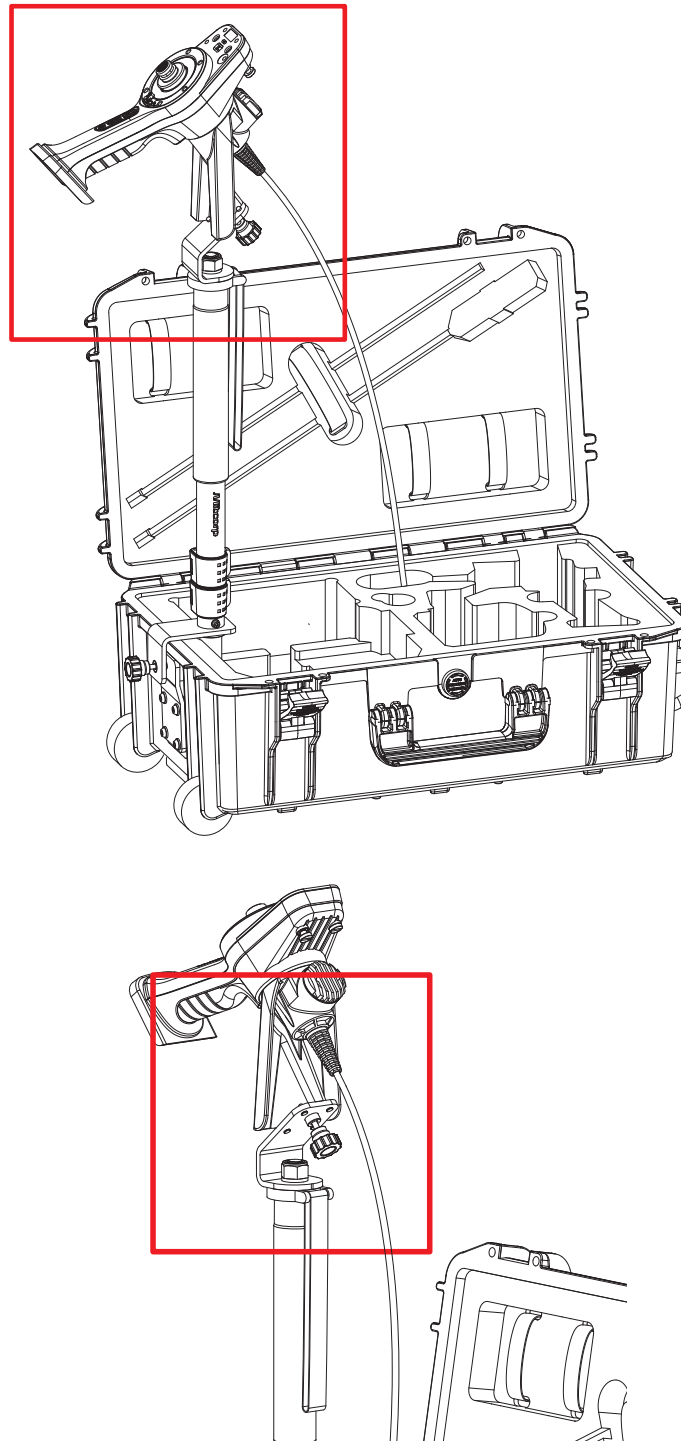

4. Finally, install the monitor unit and battery unit by order.

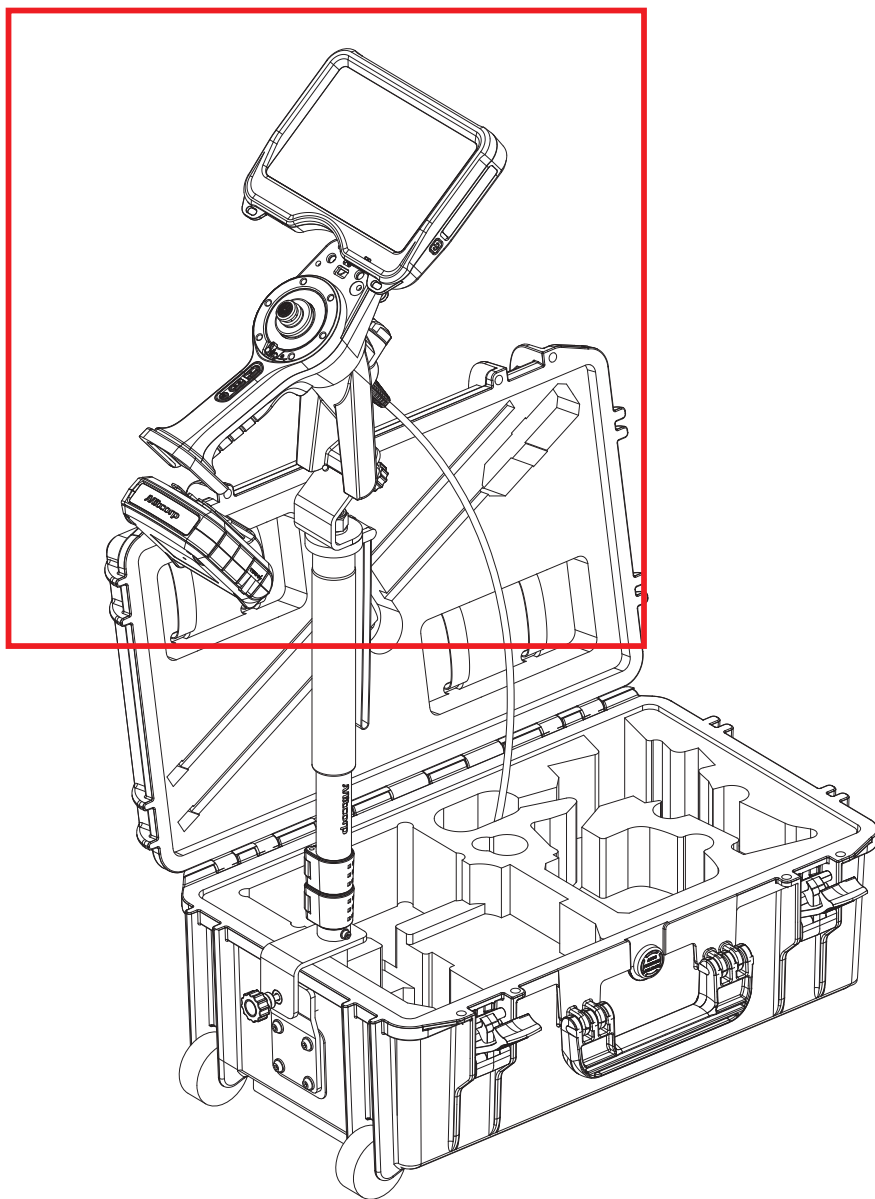


5. The monopod provide 3 sections pole for height adjustment between 80 cm to 130 cm. Unlock the lever and pull up the hand grip to the required height, hold and lock on the lever to fix the device.

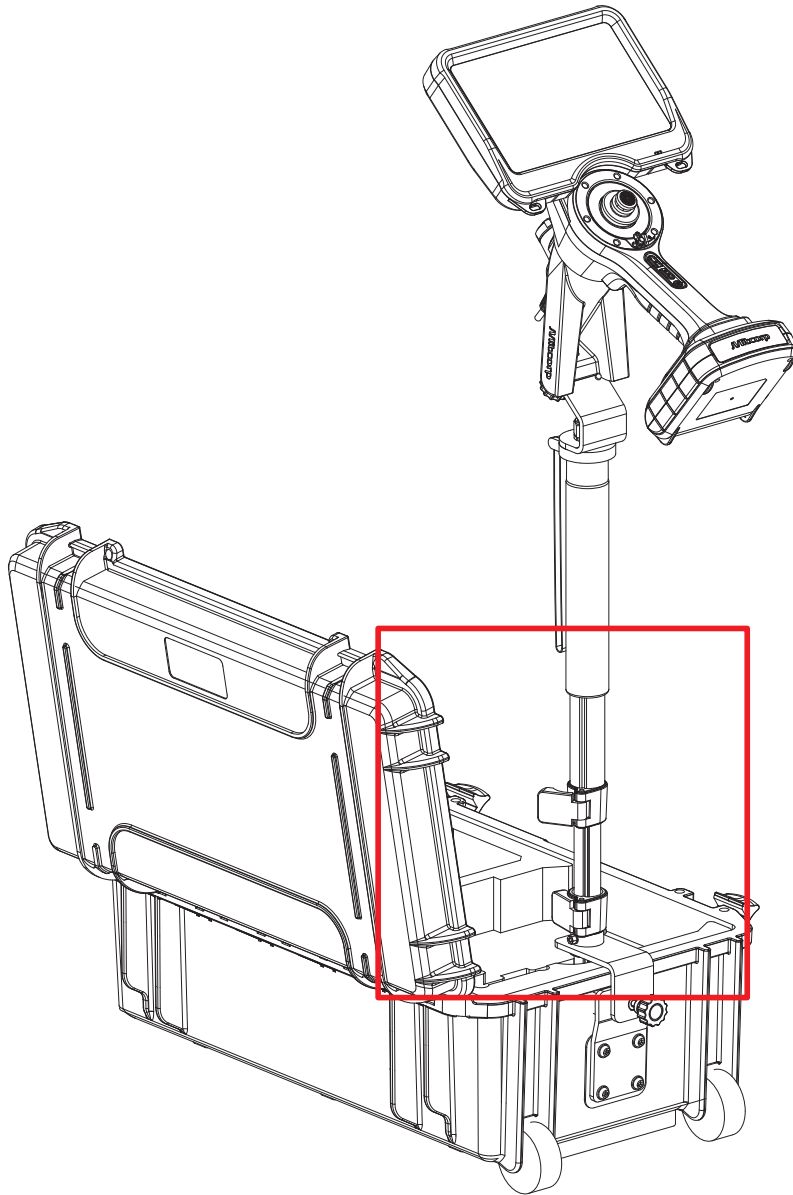


1.7.2 Rigid Sleeve



Step1
Straighten articulation tip then insert through the handgrip from bottom side till the articulation neck part is completely out of the tube.
* The pole can be detached from the handle. To detach, turn the pole counterclockwise until it is completely separated.

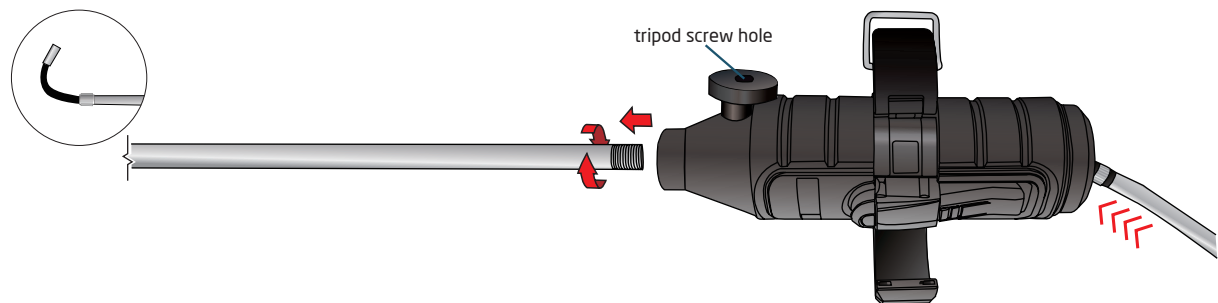

Step2
Attach the ring onto the hook notch.

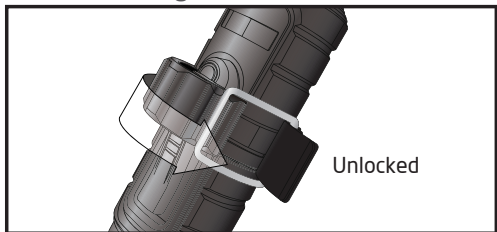


Step3
Turn the lever to fasten the fixer.

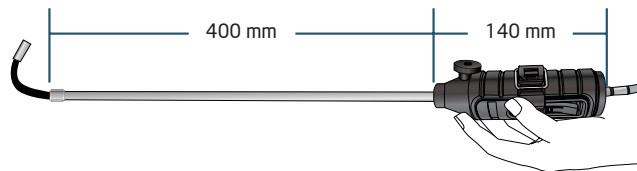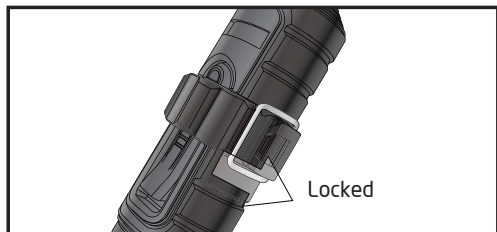

To extent the pole, assemble with the extension joint ring. When finish assembly, recommend to screw back the protection cap on the tip.

-  Protection cap - for the end side of extension pole.
-  Extension joint ring - To conjoint extra pole sections.

1.8 Function Buttons/Multi-function Control

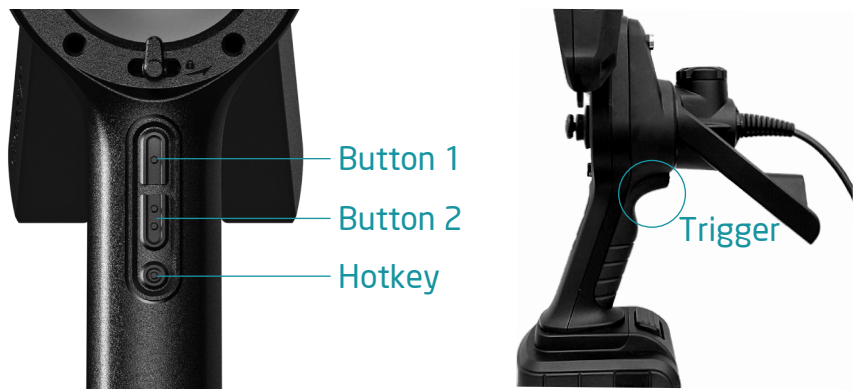

1.8.1 Function Buttons 1 & 2


Multi-function under different status:

Button	Live view status	Browser / Function list status
	Light level up	Option switch 'Up'
	Light level down	Option switch 'Down'

1.8.2 Custom Hotkey

Multi-function under different status:

Button	Live view status	Browser / Function list status
	Hotkey: 6 options available ->refers to [1.8.1]	Execute the function (Under 'Save Photo', press to 'Cancel')

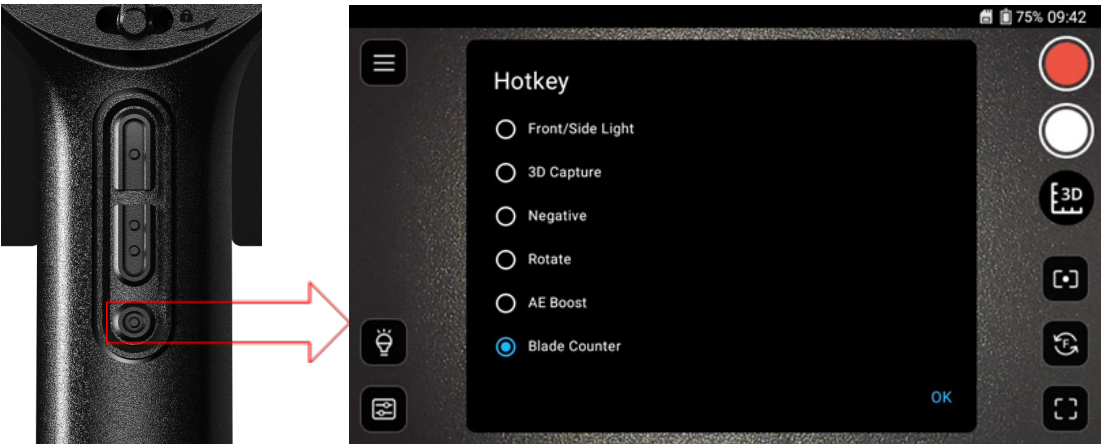

- Front/Side Light: quick switch between front light and side light.
- 3D Capture: act the button as 3D button .
- Negative: act as the Negative function [refers to 2.4.5]
- Rotate: act as the image Rotation function [refers to 2.4.7]
- AE Boost: act as one push to AE boost(long exposure time).
- Blade Counter: quick access to the blade counter function(refers to 2.4.12)

1.8.3 Trigger button / Snapshot & Recording video

Multi-function under different status:

Button	Live view status	Browser / Function list status
Trigger	*Short press->Snap shot *Long press->Recording video *Short press under 3D focus->3D capture	Confirm / 'OK' (Under 'Save Photo', press to 'Save')

Snapshot

Tap the [white circle icon 

Recording Video

Tap the [red circle icon 

1.9 Articulation Joystick/Articulation Lock Switch

The articulation joystick allows for easy maneuvering the probes.




1. Moving the joystick handle into the desired direction will prompt the probe to articulate. The articulation lock switch can be found below the joystick.
2. Flip the switch to the right to enable the lock.
3. A clicking sound will indicate successful articulation lock.
4. The probe will be locked in place after releasing the joystick.

CAUTION: Release the articulation lock by flipping the switch to the left before removing the probe from an object to avoid damage.

Part II On Screen Display (OSD) functions

2.1 Live View screen UI

- Fixed header information: SD card status/Battery status/Time.
- Function buttons of the two sides are introduced in section.
- The system provide 3 levels(1.5x/2x/3x) of digital zoom by two finger pinch gesture.

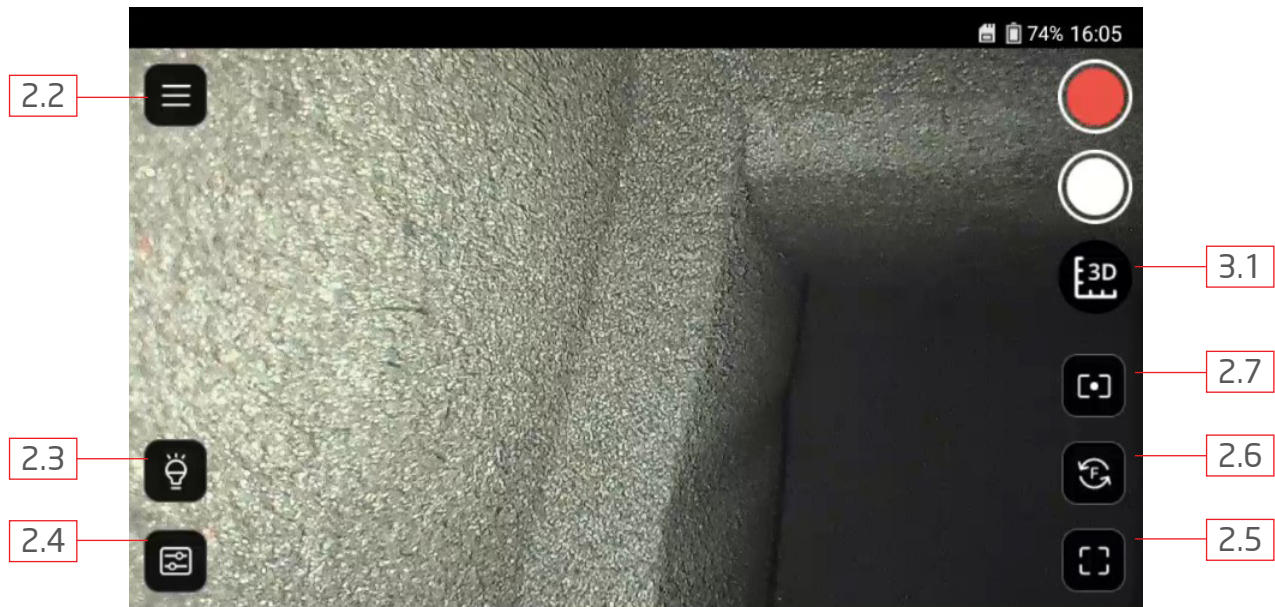

2.2 Function list



2.2.1 3D measurement

Enter to preview the saved image files by 3D capture.


You can change file list layout type and refresh the preview window by the up-right buttons.

  The up-right button  provides a calibration process.

It's recommended to do the calibration every time before measurement job. For the detail please refer to the section-[3.4].

3D file manager (available above the software version "MYGO v1.3.0")




Left side window indicate the file folder position. Under the 3D measurement interface, system will access the default 3D file. The folder will be automatically list on the second level and the files will be listed by the time orders.


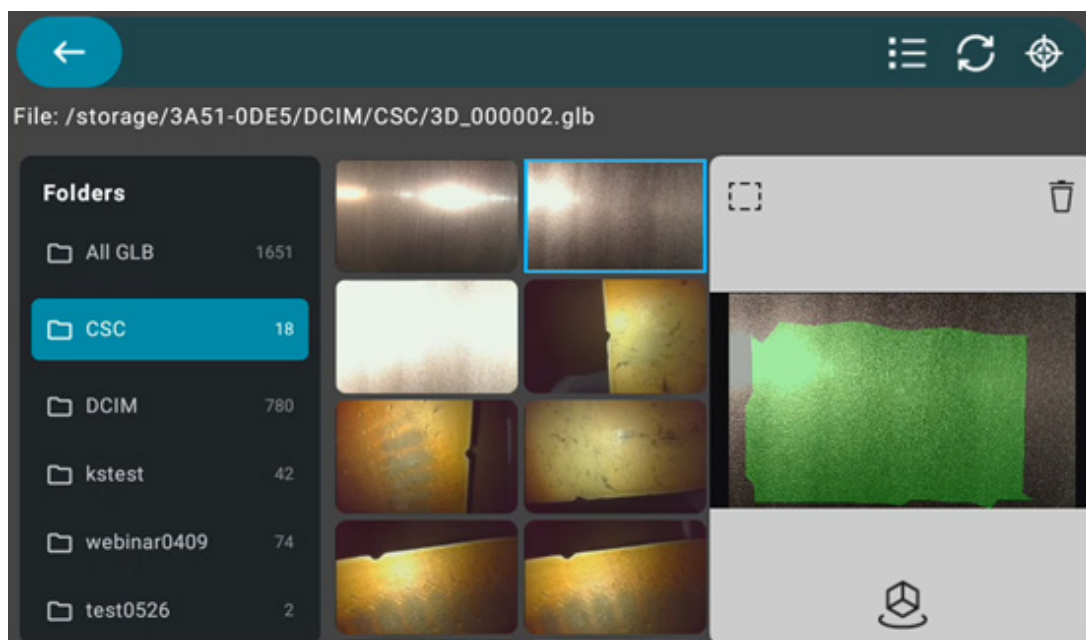


The right window shows the "green mask" that indicates the area which was successfully re-constructed. Tap the  icon can enter the measurement interface. Detail functions please refer to [PART III] .

2.2.2 Gallery

It will display the chosen folder content when enter the gallery.

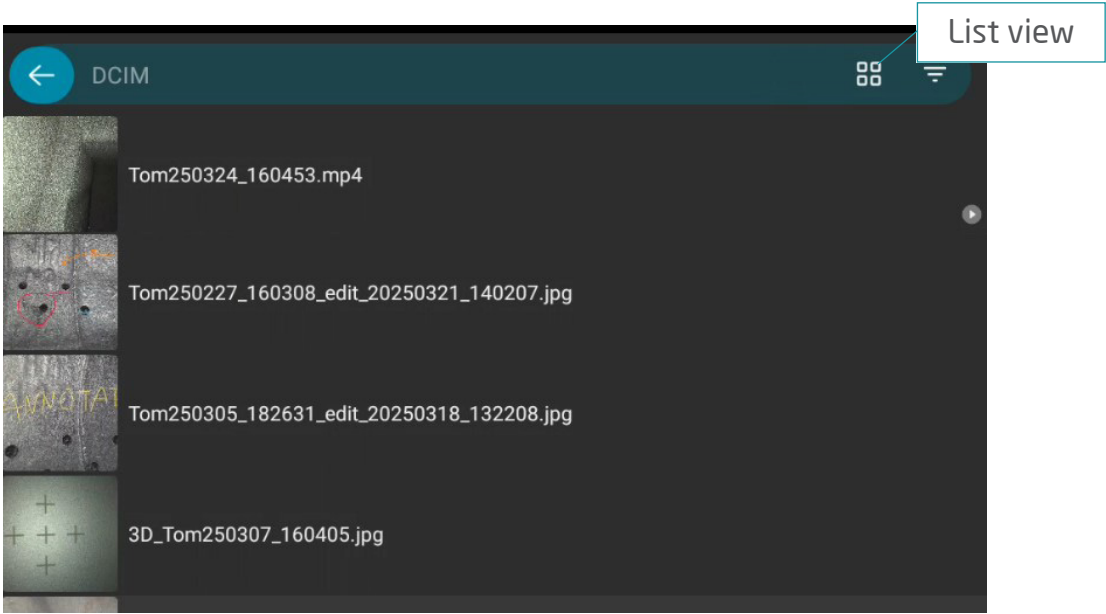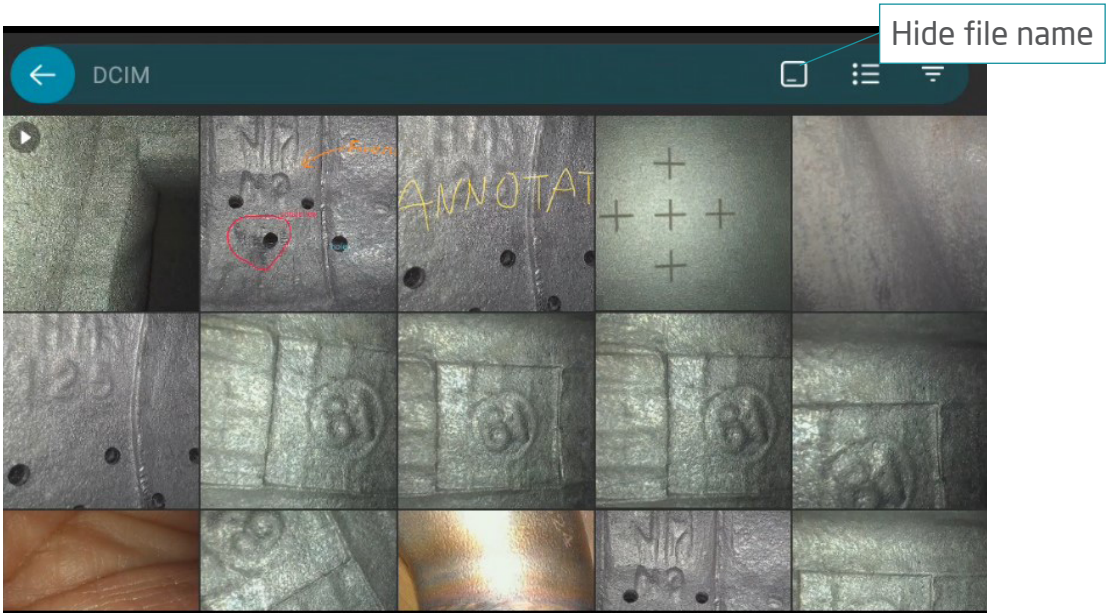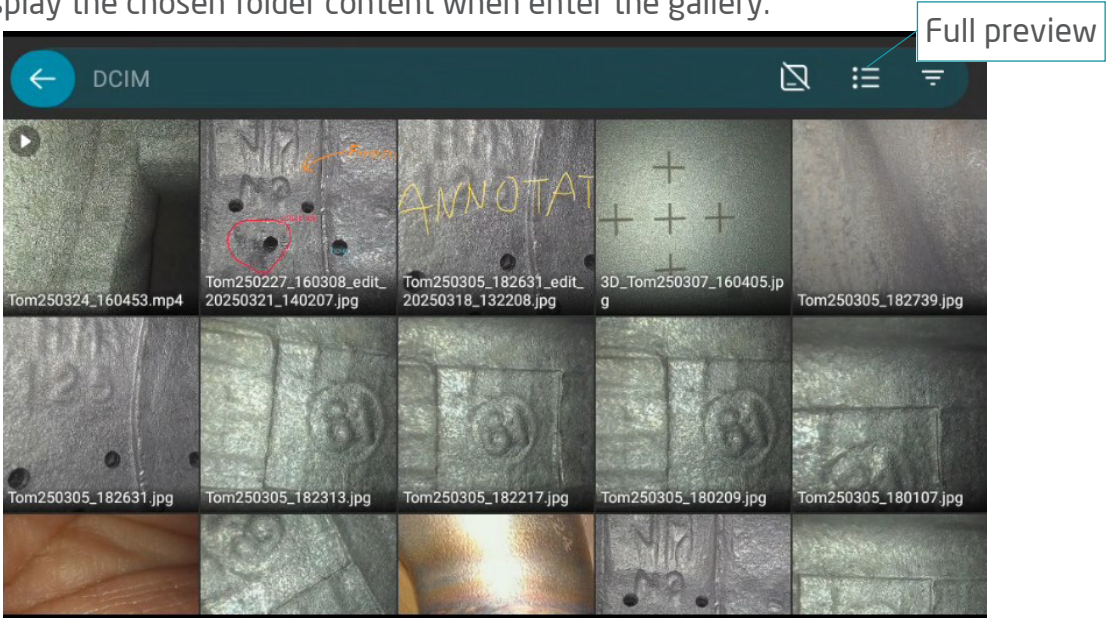

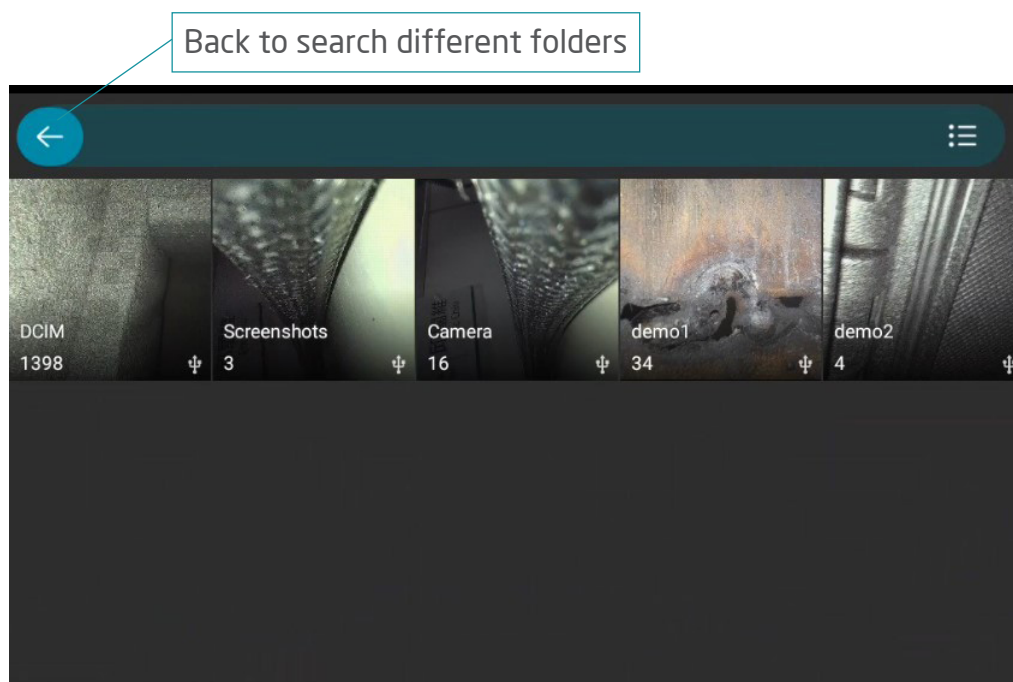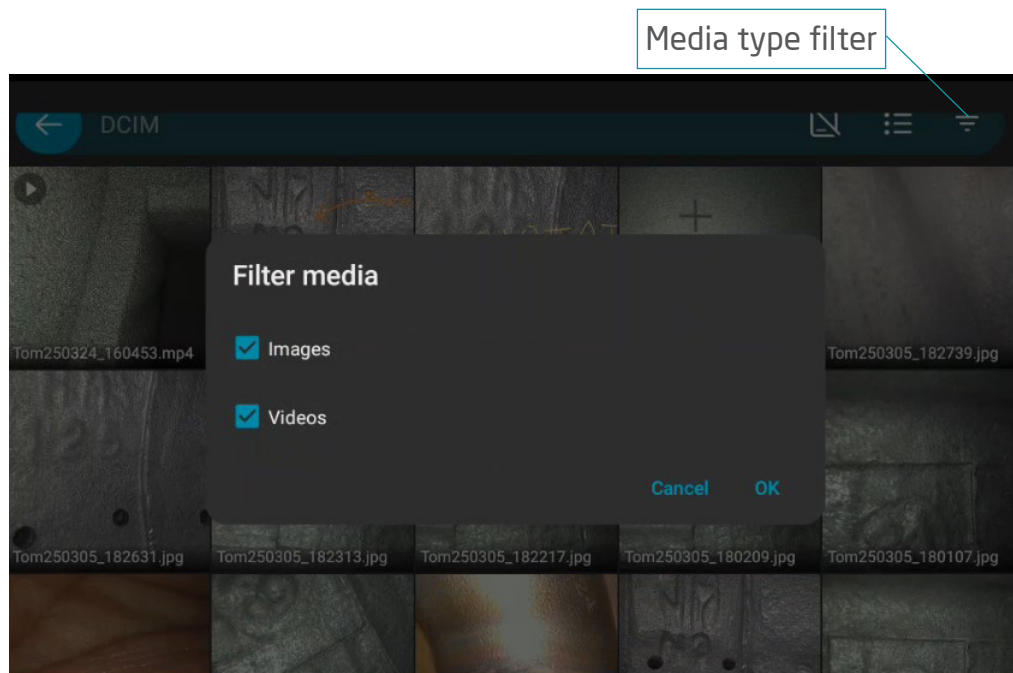


SINGLE PHOTO VIEW:

Image tools functions:

Annotation/File information/Rotation/Rename file/Delete



→ File information :

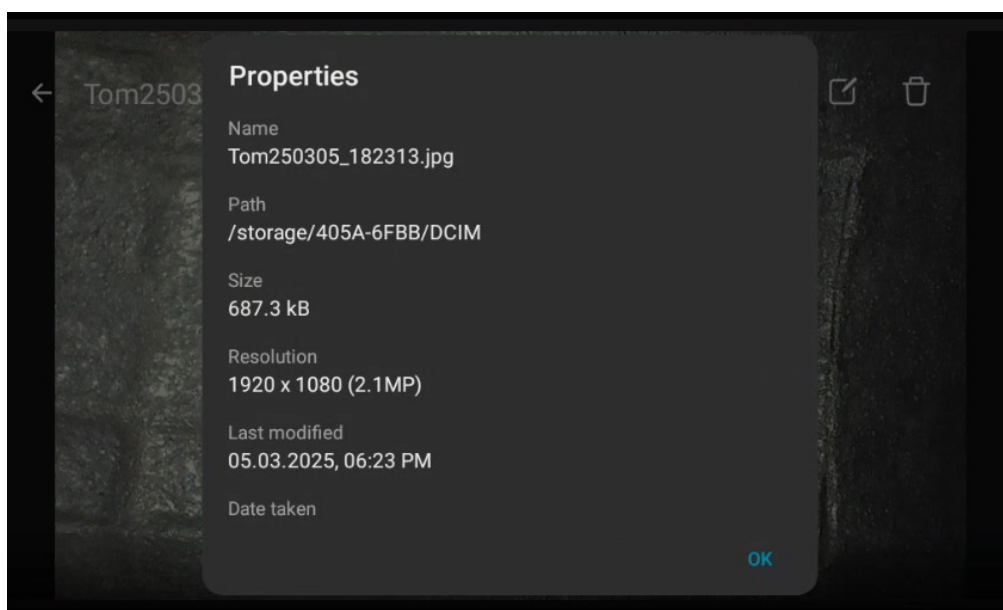


→ **ANNOTATION :**


Pen types: Brush /Line/Oval/Rectangle




Change the pen type and properties drag from bottom-up the screen

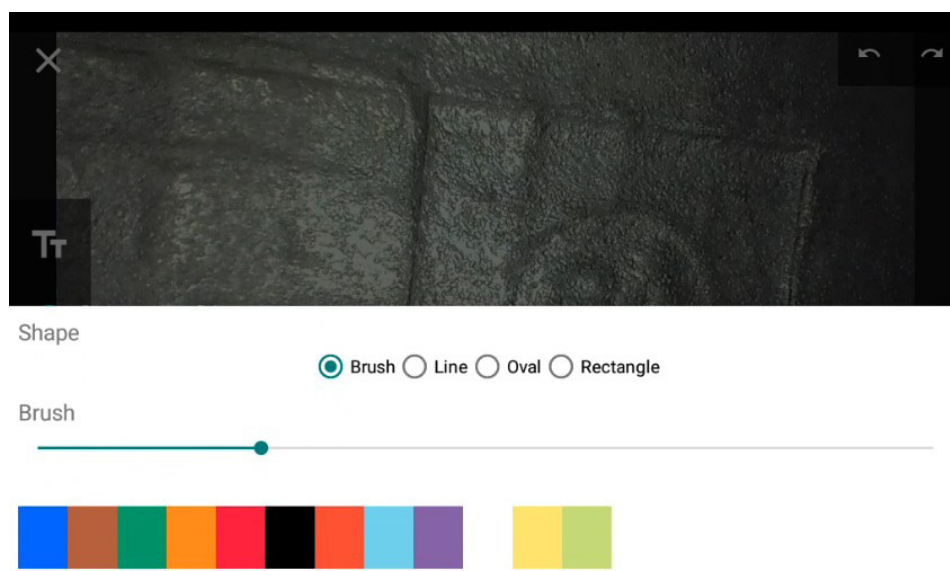


Add text box: tap and drag the text box at the needed position

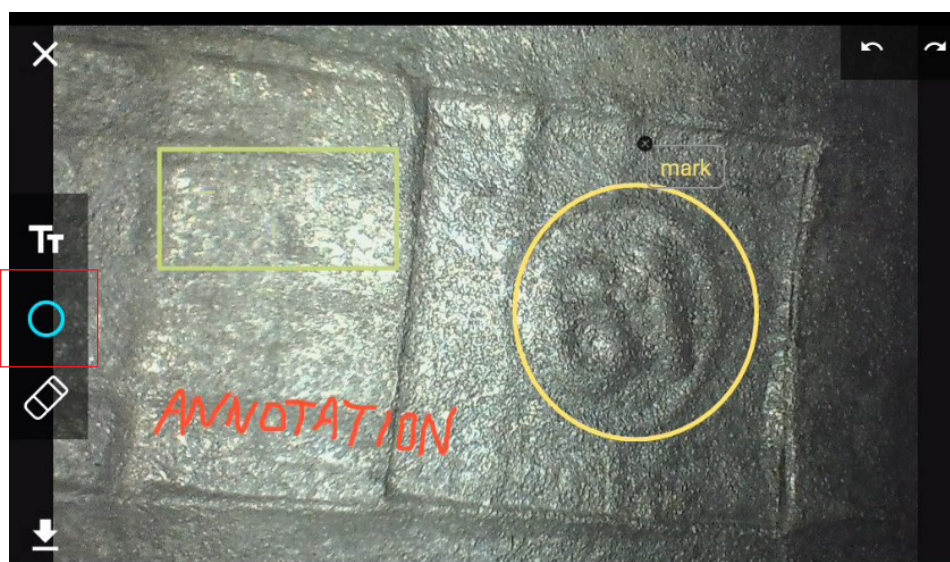


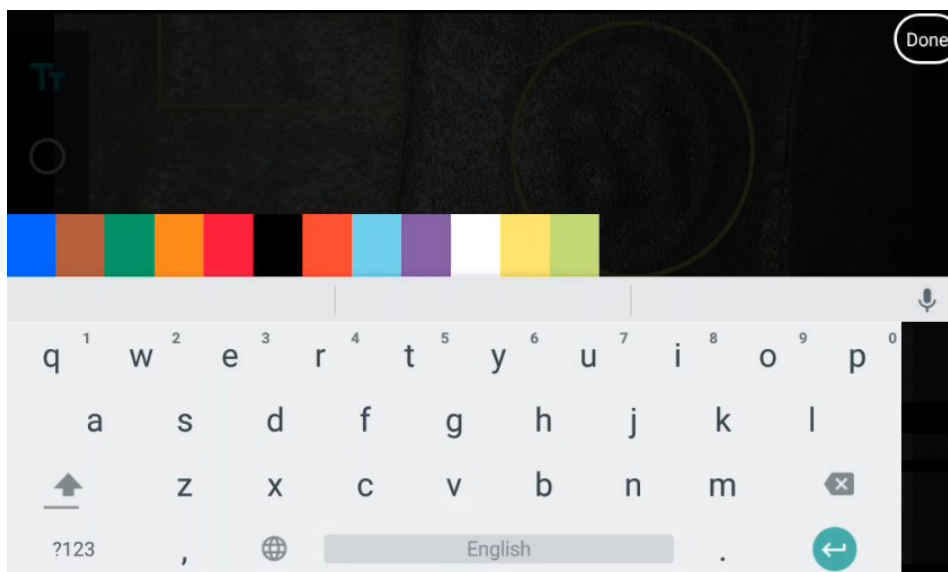

Use the Eraser or Next/Last arrows edit tools to revise the content

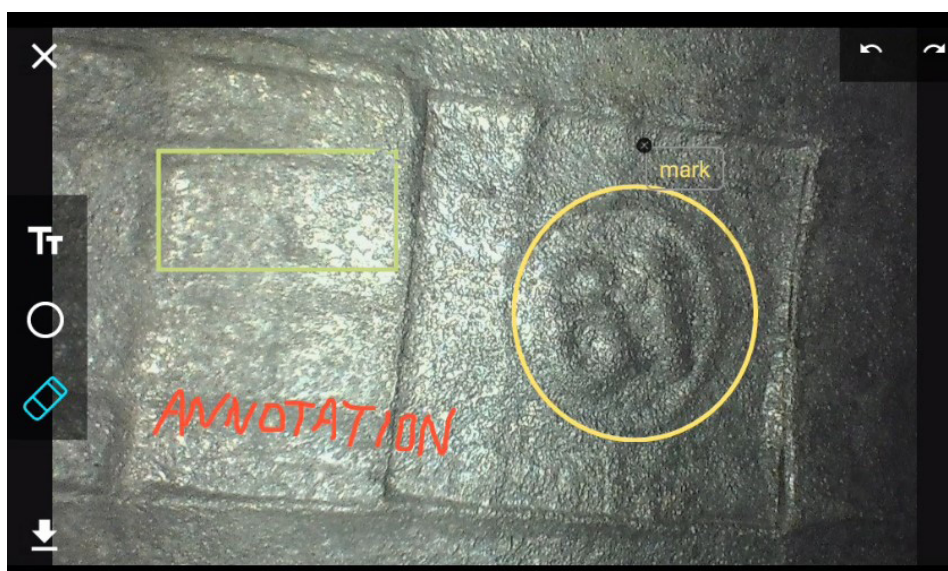


Save the image before exit. It will be saved as a new file automatically

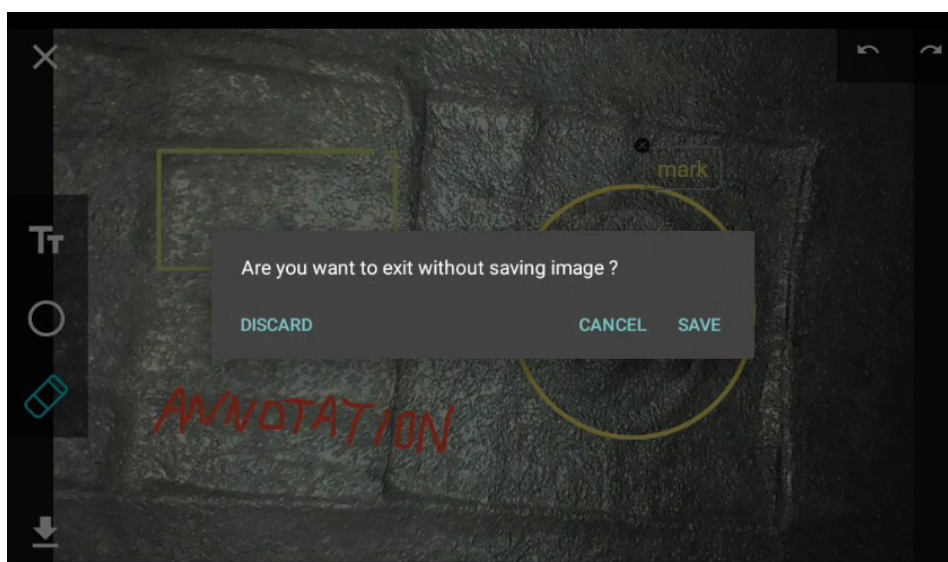


→ **Rotation:** Provide 3 ways image rotation function.



→ **Rename file:** Rename the saved file.

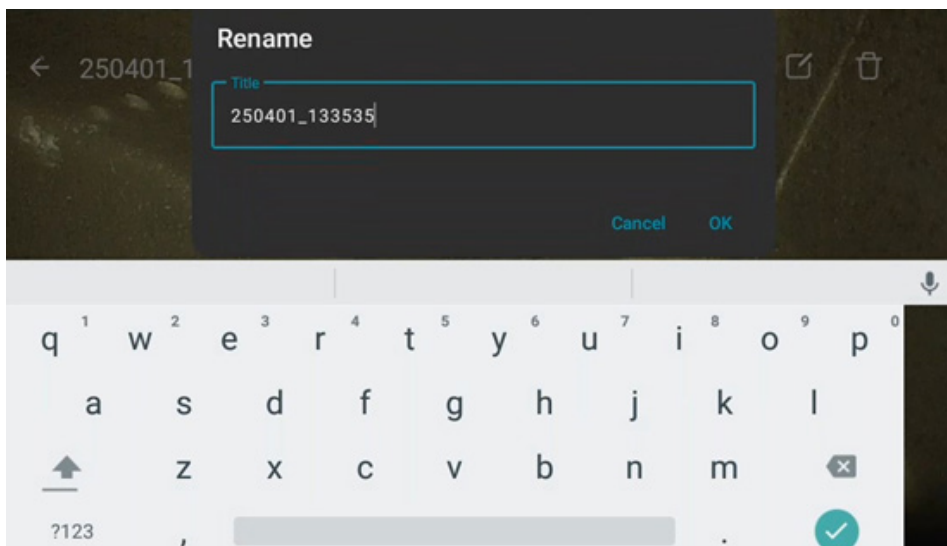


→ **Delete file:** Delete the saved file.


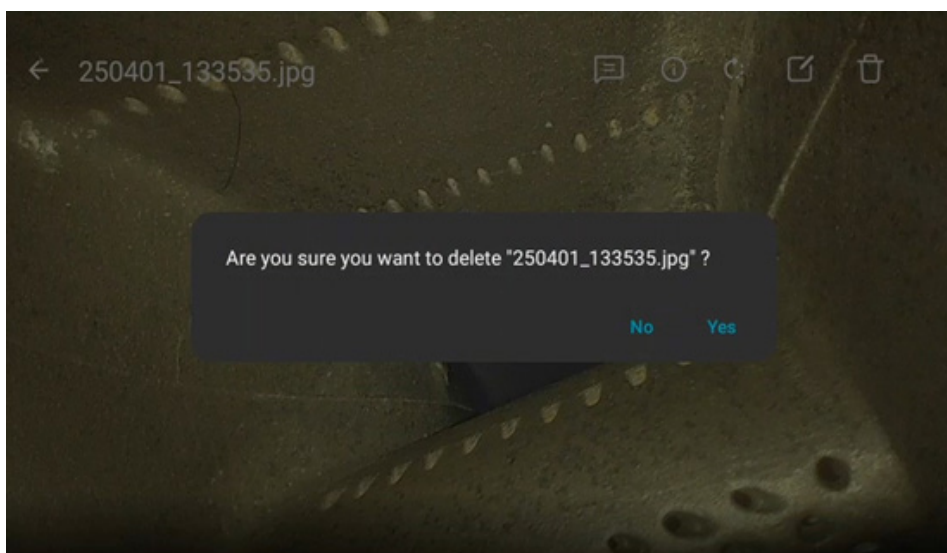


2.2.3 Settings




Wi-Fi connection: The system support Wi-Fi hotspot mode for connection to mobile utility APP-"VideoscopeX". (ps. There is no Internet connection in the first "Wi-Fi" button which can be ignored.)

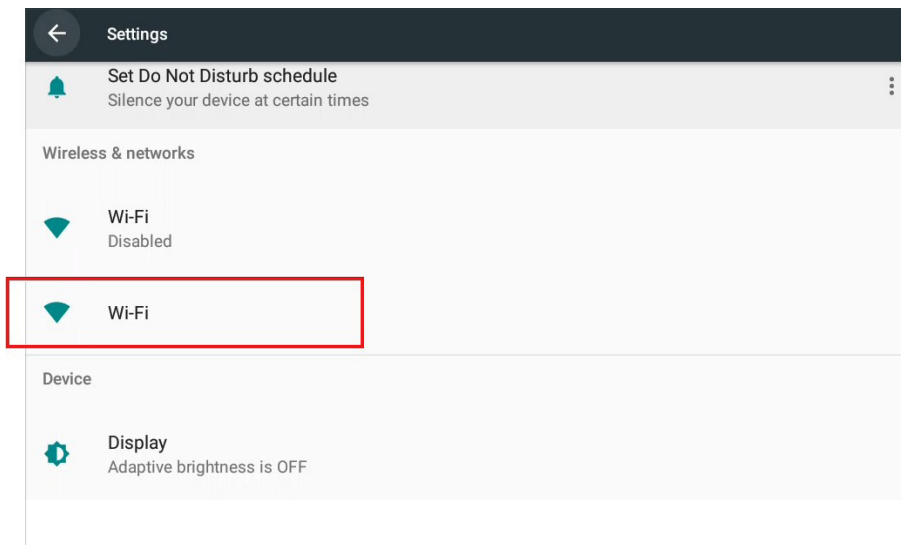


Enter the Wi-Fi hotspot settings and revise the device 'network name' and 'password' upon your preference. Then active the 'portable Wi-Fi hotspot'.

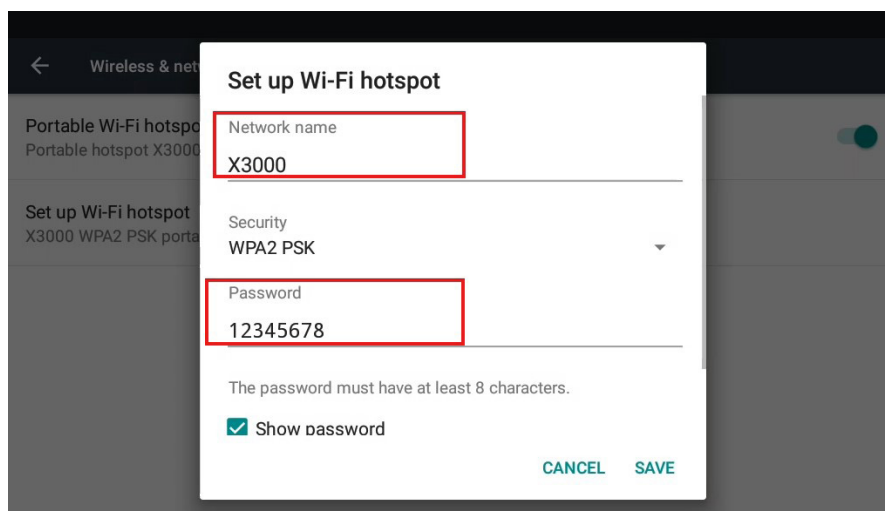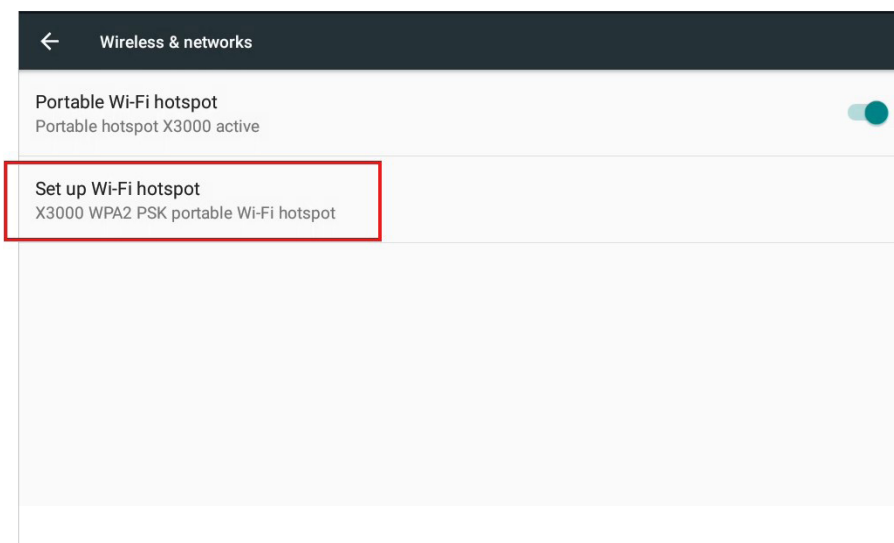

→ **Storage:** The system support up to 128 GB micro SD card.
Recommend to do the format process as follow every time
change a new memory card.

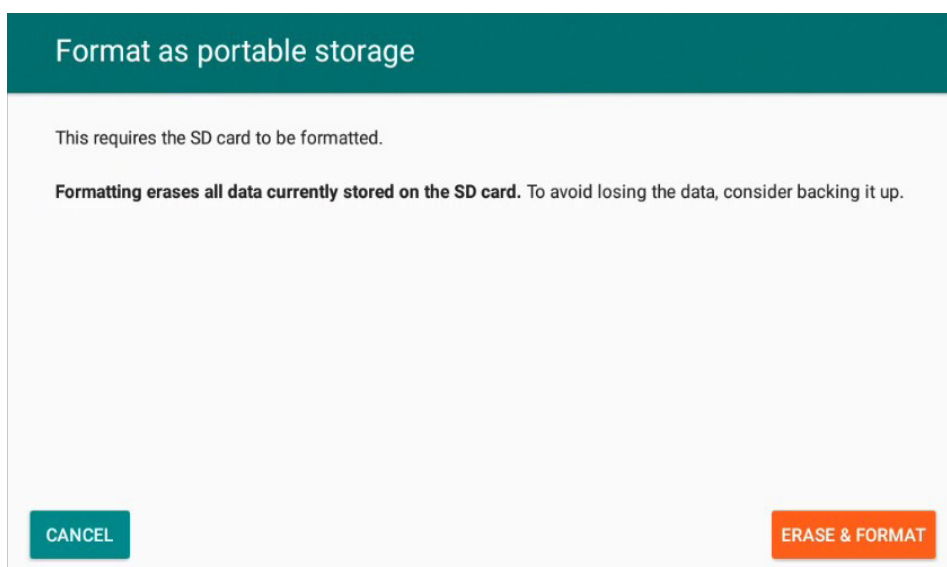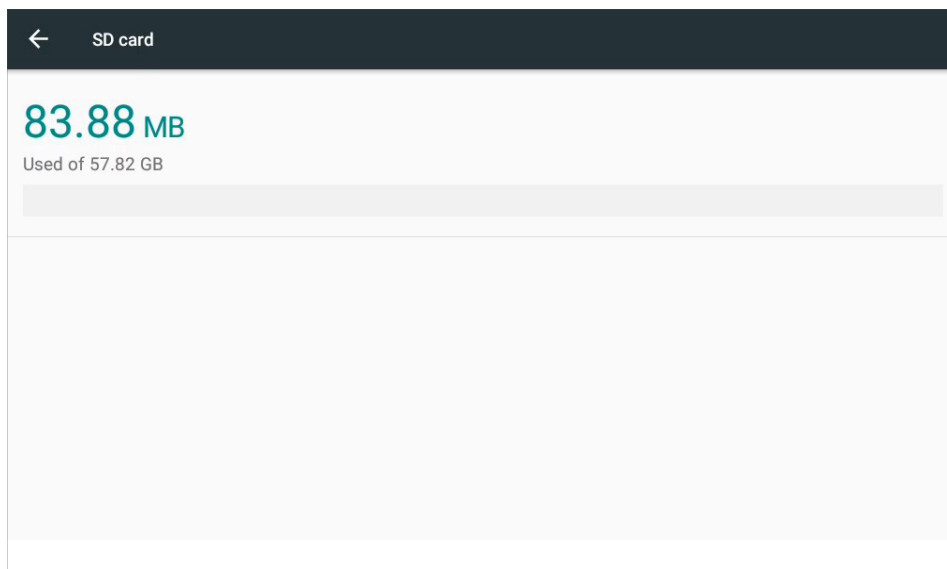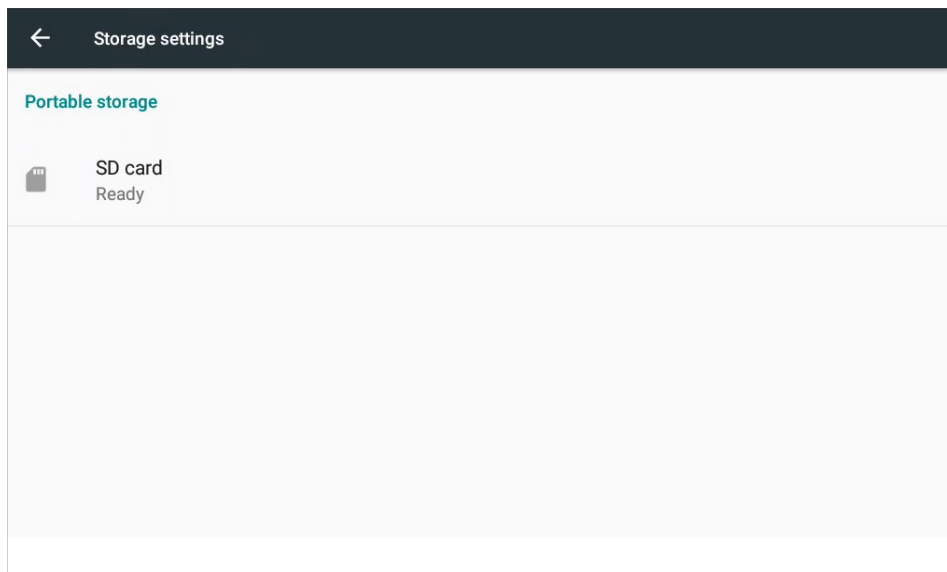


→ USB: Use the USB cable to connect to PCs for transfer image data. The system will be recognized the device as 'X3000'.

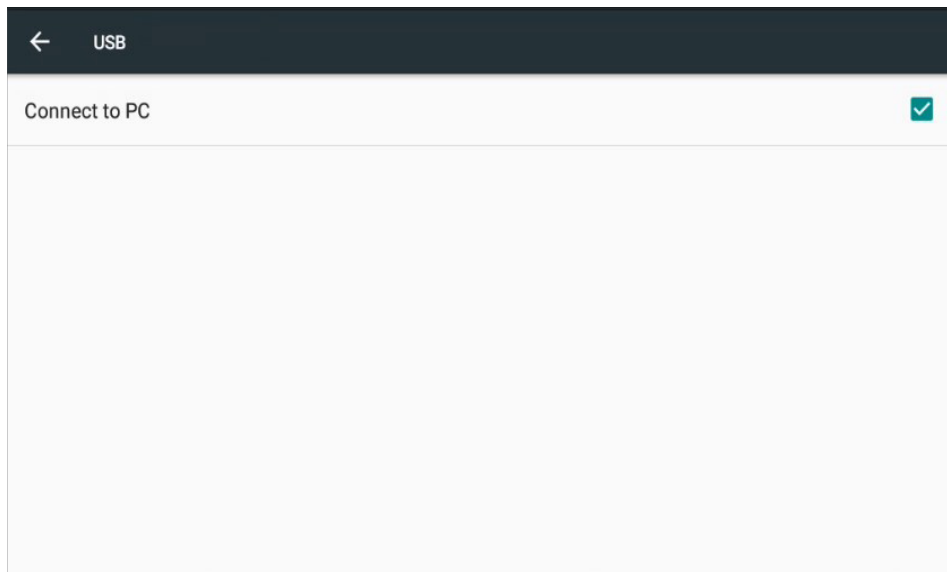


→ **Language:** To change the input and interface language, follow the steps below:


Step 1: Enter the [Language & input] of the second page of the menu-[Language preferences]. Tap [+ Add a language].

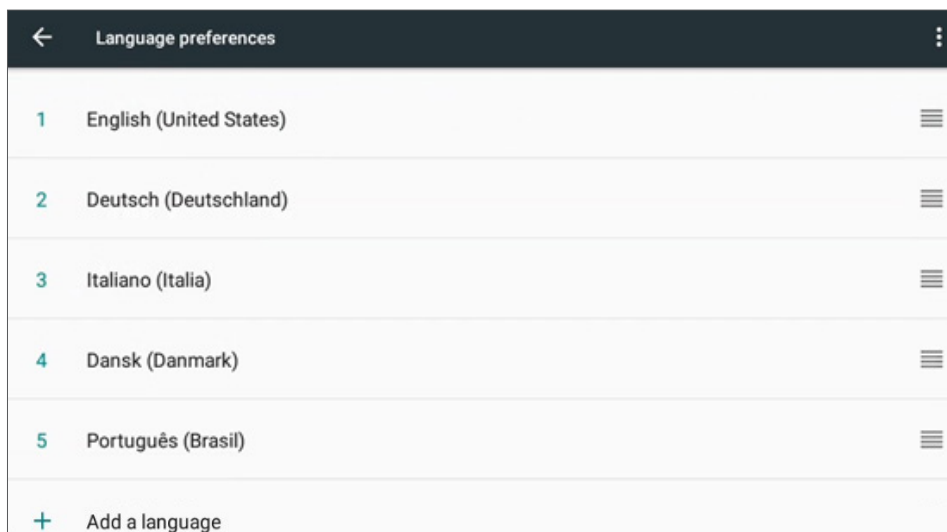


Step 2: Slide down the list to find the language required. Tap anyone to ad into the preference list.

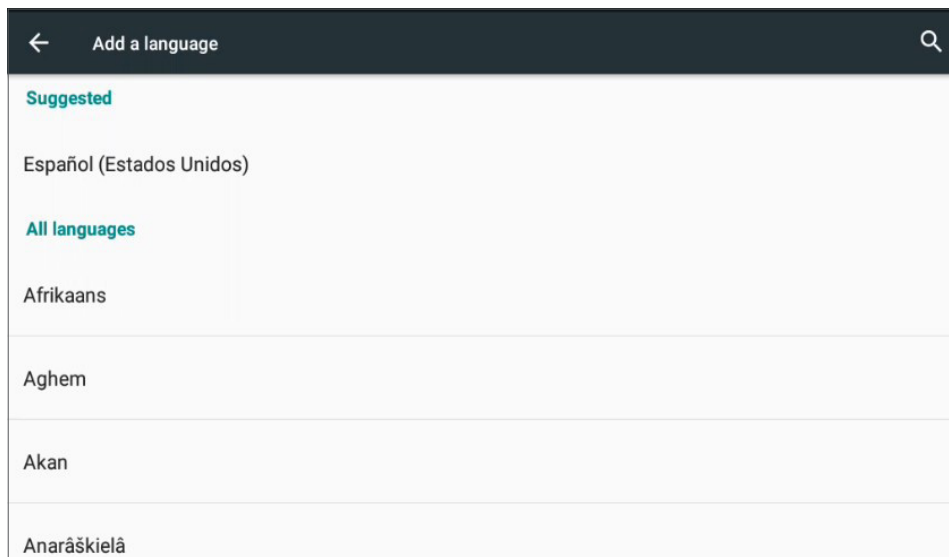


Step 3: Tap and drag the language item onto the top of the list to setup UI language.

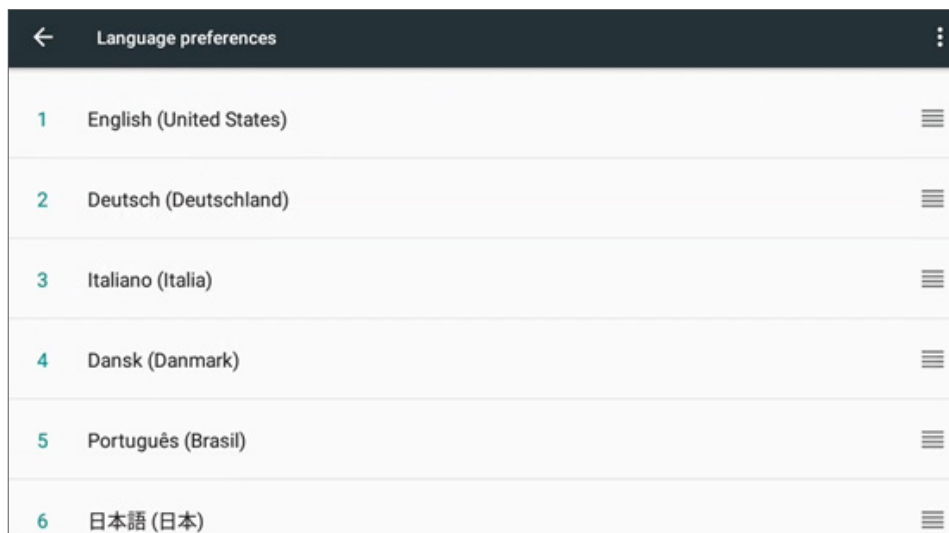

Date & Time: tuning the date,time,and formats.


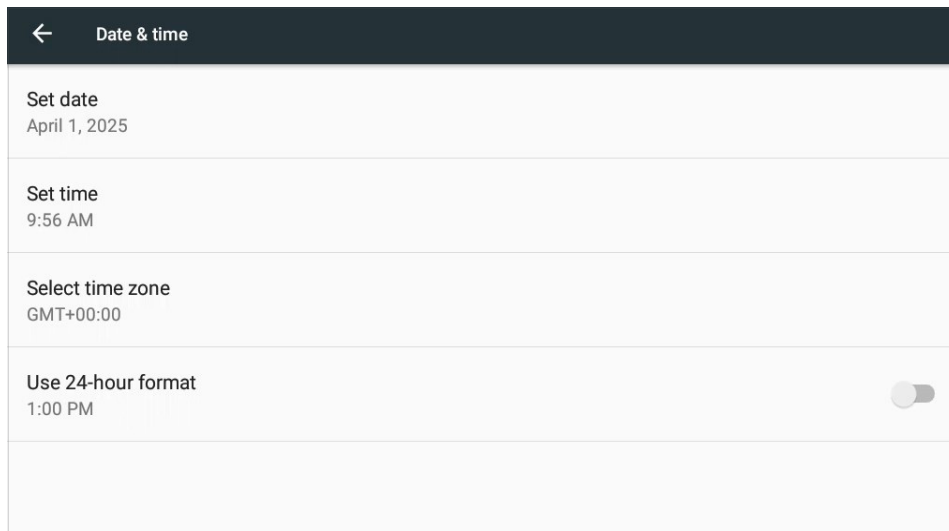


2.2.4 Info.

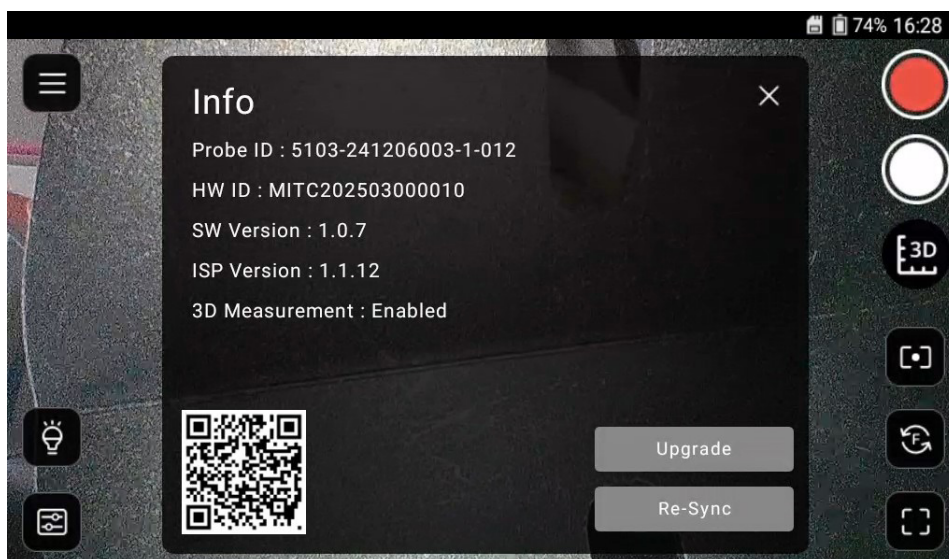

[APK Upgrade]: When new version is released, save the [.apk] file in SD card root directory then press [Upgrade] and select the file to install. When the upgrade is completed, press the reset button(right side of the monitor) at first, then restart the system to enable the new software.

[Probe re-sync]: When new probe attached to base unit, the internal data will loaded automatically. But if the focus white circle misalignment or 3D reconstruction not successful, you can press [Re-Sync] to reload the data from probe again.

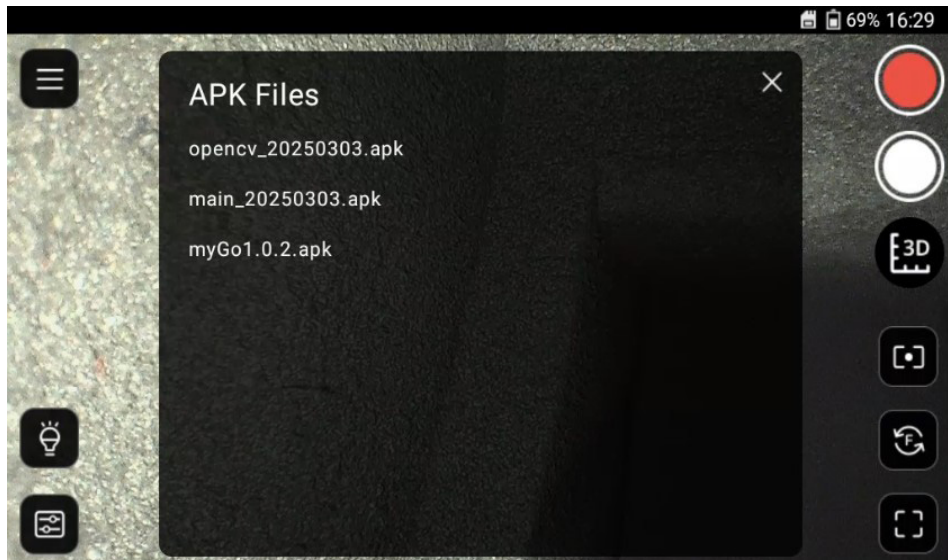




Upgrade Progress: 5%

Please press the reset button and restart the device after the upgrade is finished.

2.2.5 Media Preference

The system provides 3 media preference settings to meet different kind of file management needs.

- **Storage location**: Add and name new folder for file saving

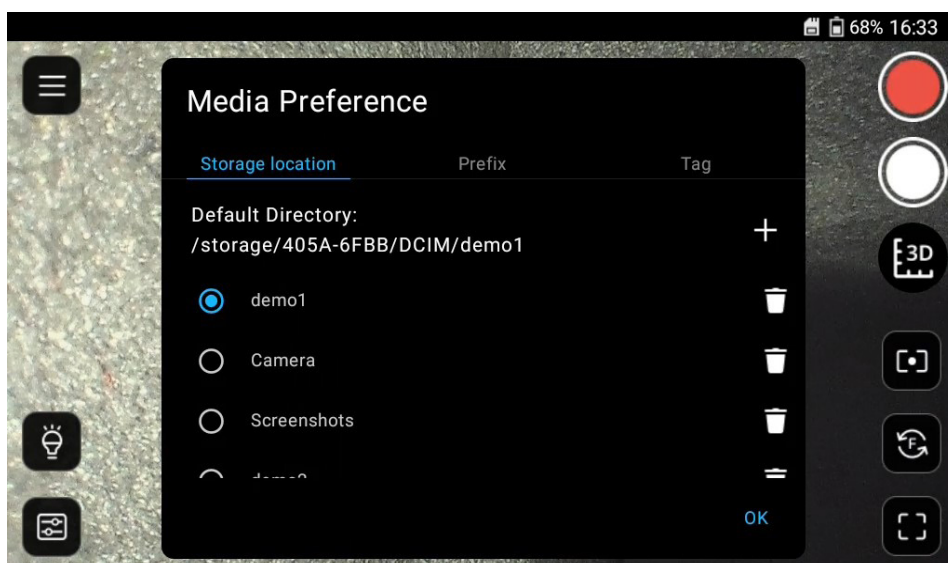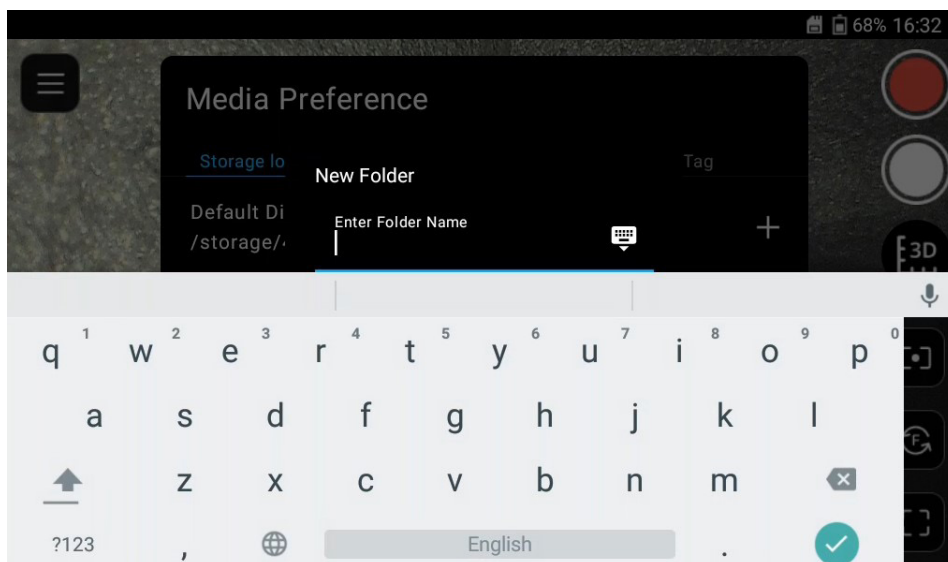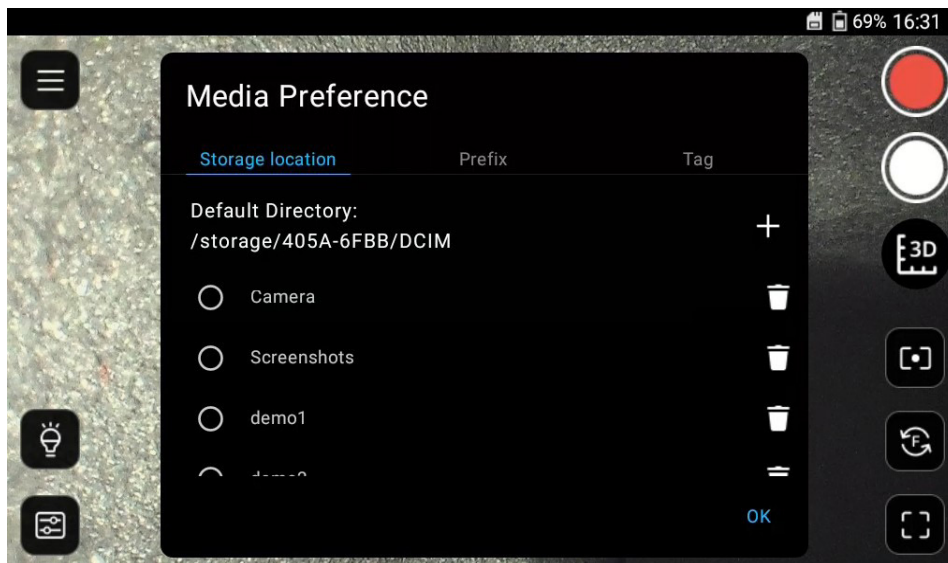

- 4 types of the saved image files:

Media Type	Operations	File name	File resolution
Normal 2D	Snapshot	'xxxxyyyyzzz'.jpg	2560*1440
3D modeling	'3D capture' produce pairs of files as same main file names into [.glb]/[.jpg]	3D_'xxxxyyyyzzz'.glb 3D_'xxxxyyyyzzz'.jpg	1920*1080
Measurement	Measurement results saved images	ss-'xxxxyyyyzzz'.png	1024*600
Annotations	Saved images after annotations	'xxxxyyyyzzz'_edit_8 digits 'year-month-date'_6 digits 'hour-minute-second'.jpg	1021*574


Ps. 'xxxxyyyyzzz' file name context is according to your prefix setting.

Ps. Open the 3D file on 3rd party software:


The 3D modeling files can be read by other 3D viewer software (such as: "Microsoft 3D Viewer") that compatible with [.glb] files. Copy the pairs of [.glb]/[.jpg] files on personal computers and load the files by the software applications.

Please check 3D model orientation, scale and units before using

- **Prefix:** You can set the saved file name as different header(ex. Inspection parts name) for quickly distinguish the content by the file name instead of review the photo content. The file naming sequence can be set at "Timestamp" or "Index" types. The prefix can leads to users' of file sorting and management needs.
 - **By timestamp:** It will be an 6 digits 'year-month-date' and underline break 6 digits 'hour-minute-second numbers'.
For example: [20250310_110824.jpg] refers to the snapshot at 11'08"24 on March 10th, 2025.
 - **By index:** User input characters by tap the File Prefix "+", and system produce the follow up underline break 6 digits hour-minute-second numbers.
For example: [HPT01250310_153221.jpg] refers to the snapshot at 15'32"21 on March 10th, 2025.

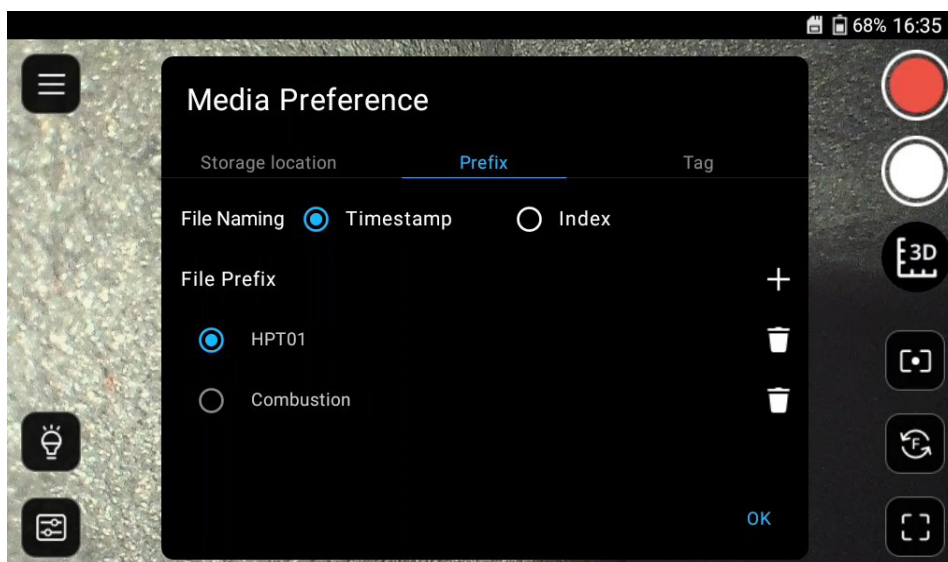

- **Tag:** You can set text tags to be printed on the saved images. Image tag helps identifying 2D photo's inspection object, inspector's name, etc.

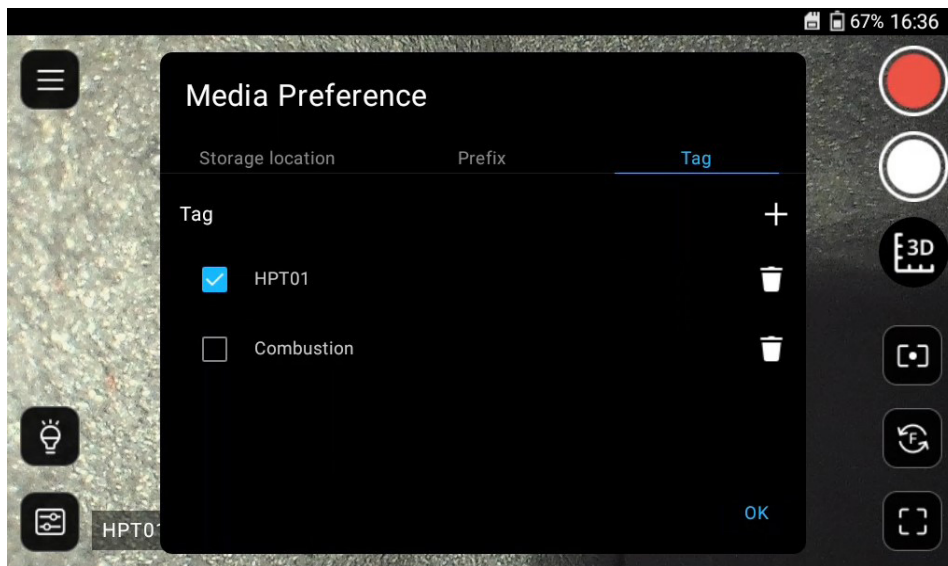

2.3 AE control

Tap the light icon and drag the bar to control the auto exposure value of the whole live view area. It is especially useful for dark inspection space.




System provides 11 levels adjustment by different parameters. [0~8]: exposure value, [9~10] frame rate (yellow dot on the tuning bar). On [9~10], the lower frame rate may cause some afterimage when the camera moves.



*Boost function: long press the light icon till the icon displays in yellow, the frame rate jumps into extremely low. This operation may be required when the environment is a big, wide, dark chamber space to navigate the target's direction.

2.4 Advanced Settings


Tap the down-left icon . The system provide varies of image tuning functions. You can tap the up list icons to switch on/off and gesture slide down to find every control drag bars.

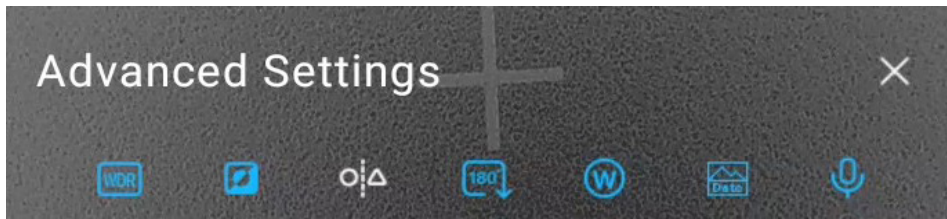

Individual instructions as follows:

2.4.1 Brightness Control


The front light and side light control bars are separately refers to the camera view angle is on. It controls the real light source current output.
The brightness controls the display brightness value.

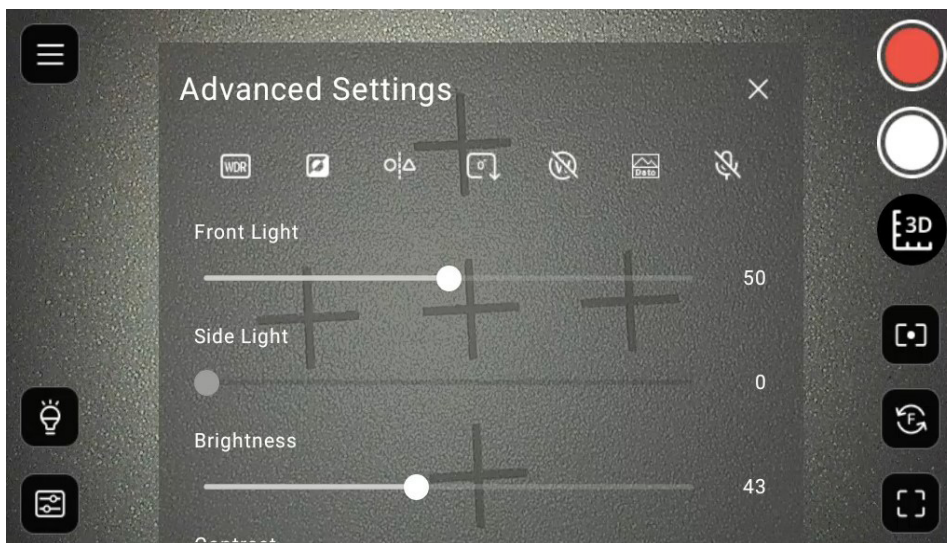

WARNING - When the probe's illumination keep output at maximum level over 20 minutes, the temperature may raise at 63°C.



2.4.2 Image fine tune

The system provides 3 image fine tune parameters:

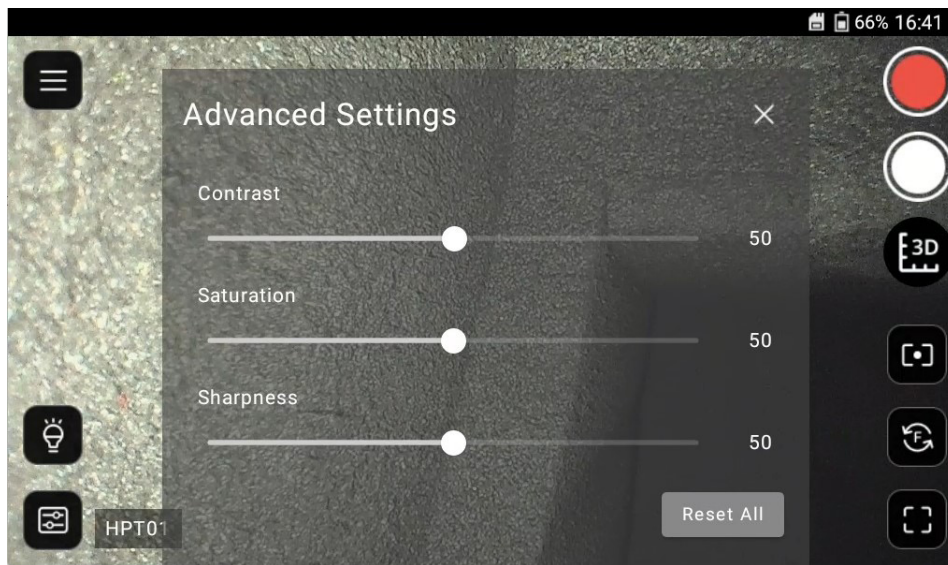


2.4.3 White Balance

The system provides R-G-B white balance parameters for tuning :

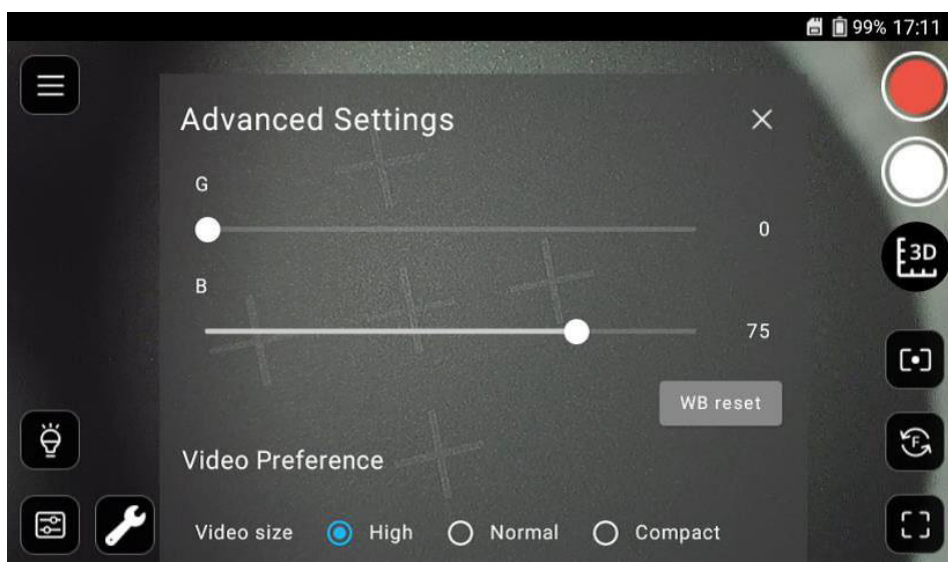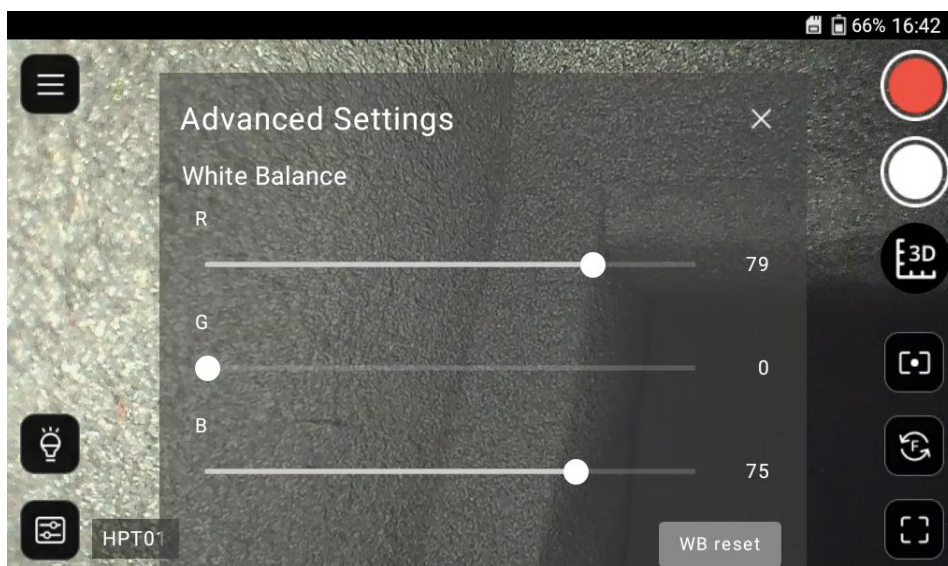


2.4.4 Video Preference

The system provides 3 options of saved video size.

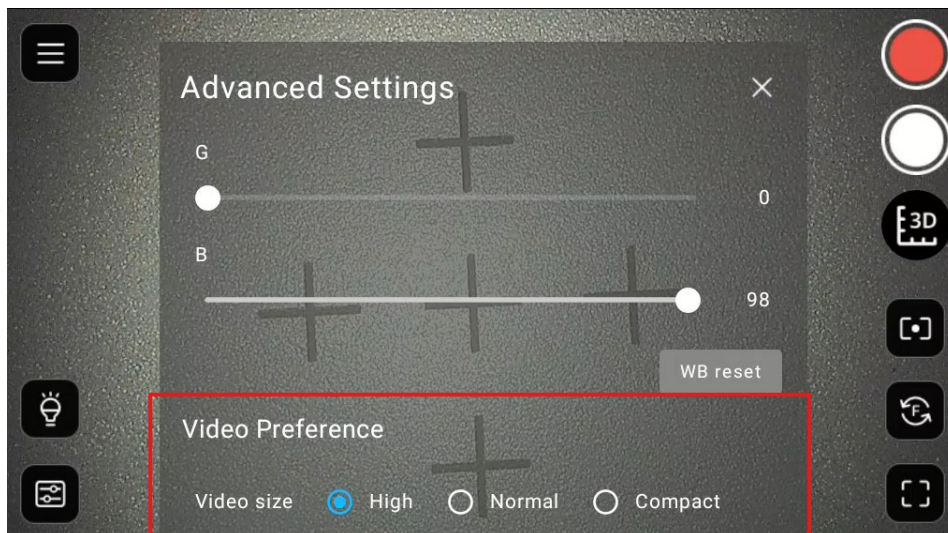


2.4.5 WDR

The system provides the wide-dynamic-range (WDR) function that takes 3 different exposure value pictures and merge in one to get better brightness performance output image when the inspection area cover too dark and bright parts.

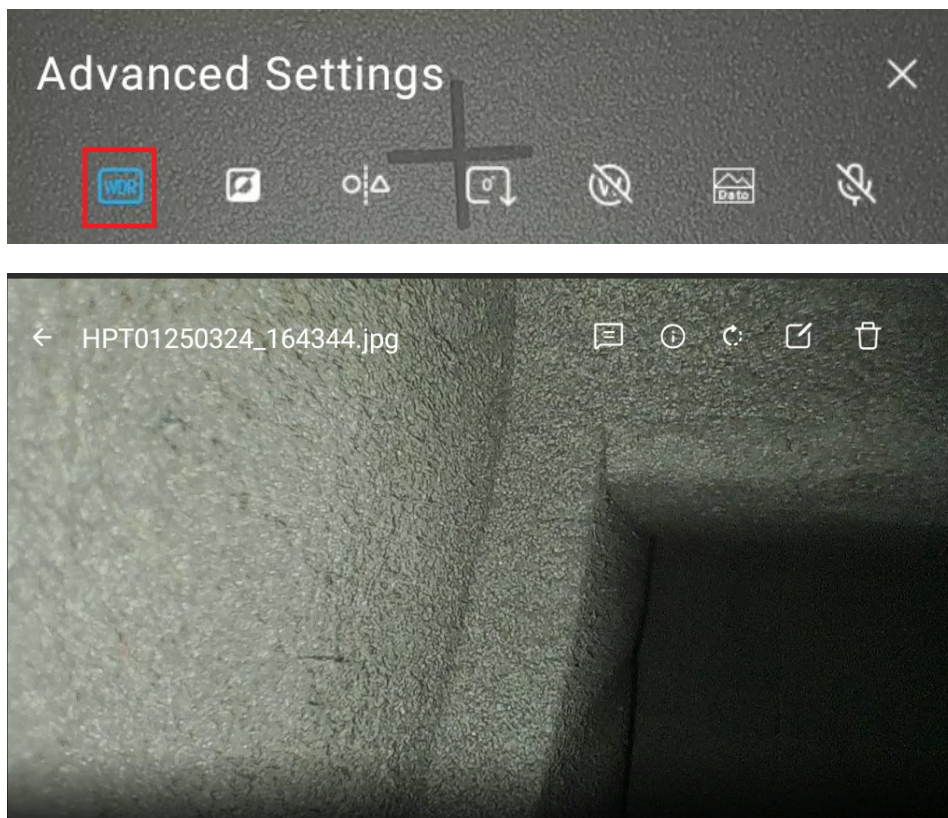


2.4.6 NEGATIVE


The system provides the function to turn the image into negative film effect output. It is especially useful when inspecting reflective surface for detail fine scratch defects.

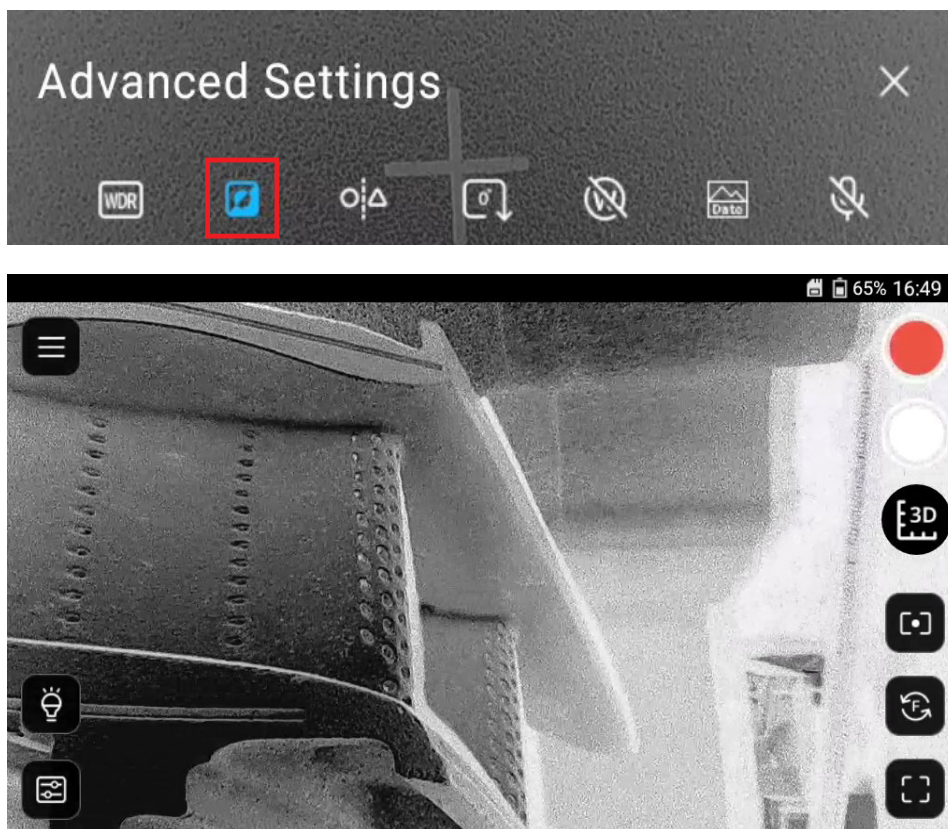


2.4.7 COMPARE

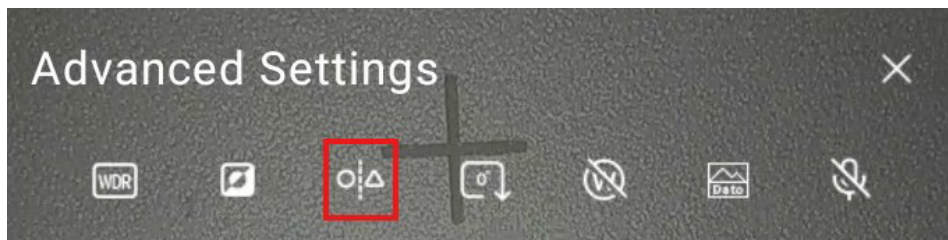


1. Separate live view window: Tap the icon, the screen will be divided into two windows. The default is live view on the right and compare file in the left side.

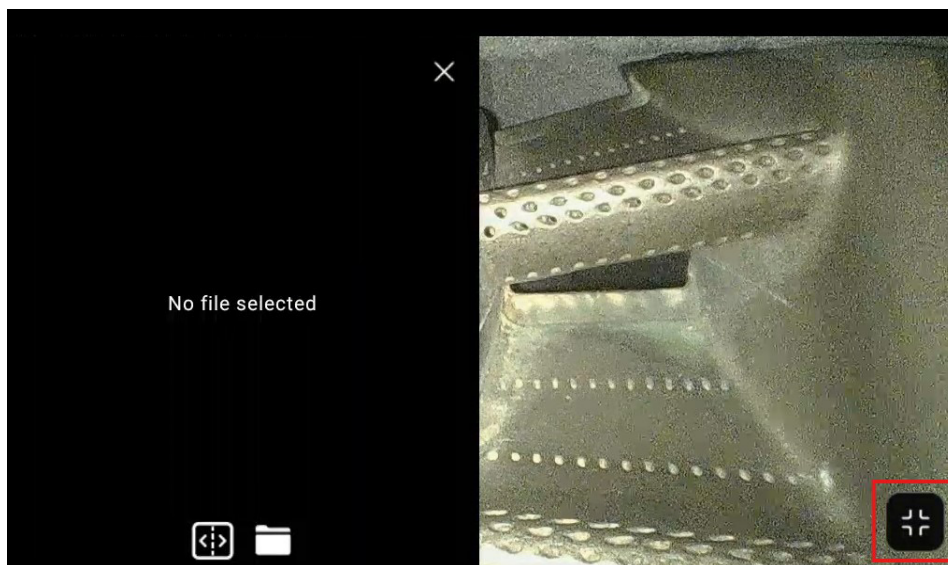

Tap the file folder icon to access the gallery to pick up compare image.

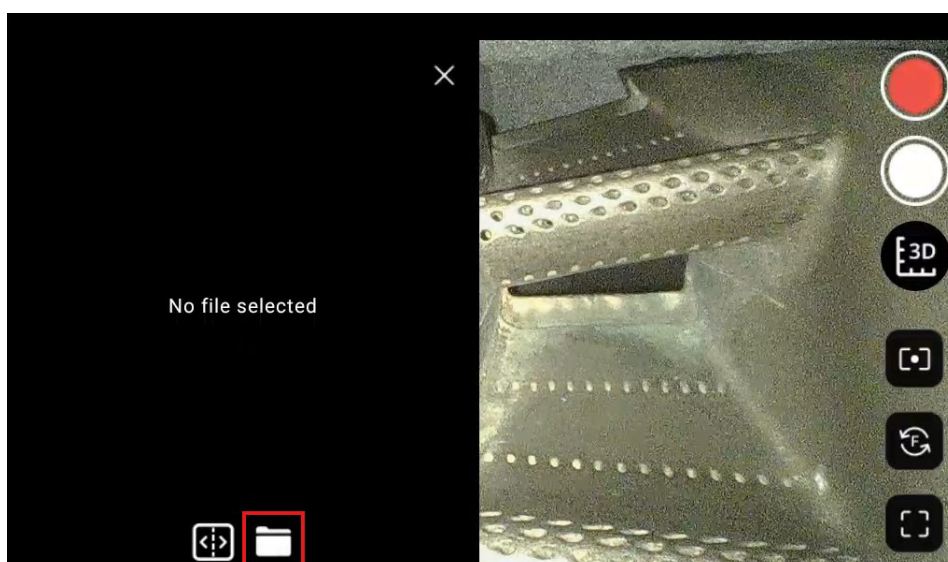


2. Select a compare image from gallery: Tap any image and preview in the right window. Tap the v check box to confirm using the file.

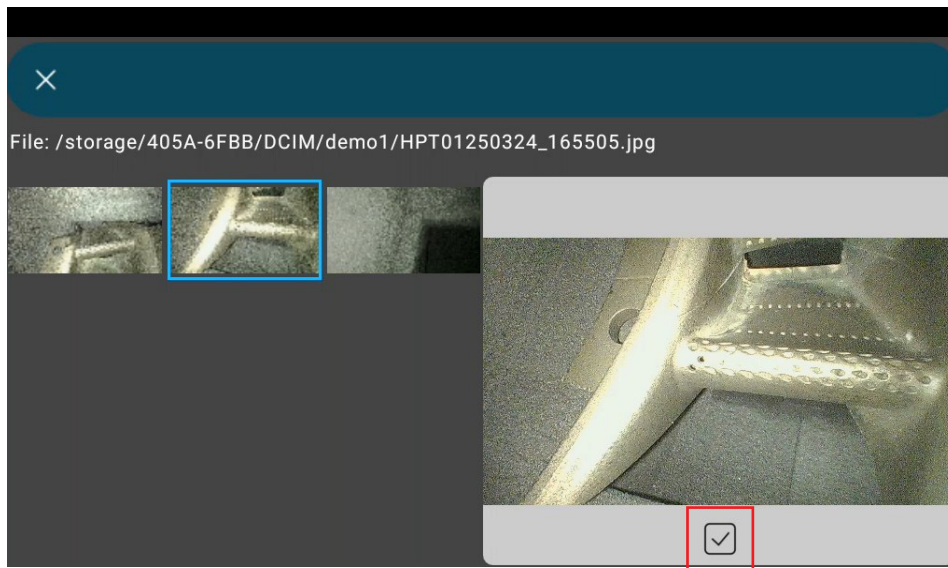

3. Move still image view range:

- o The selected image's left part will be shown in the left window. You can tap and drag the image to move to the target position.

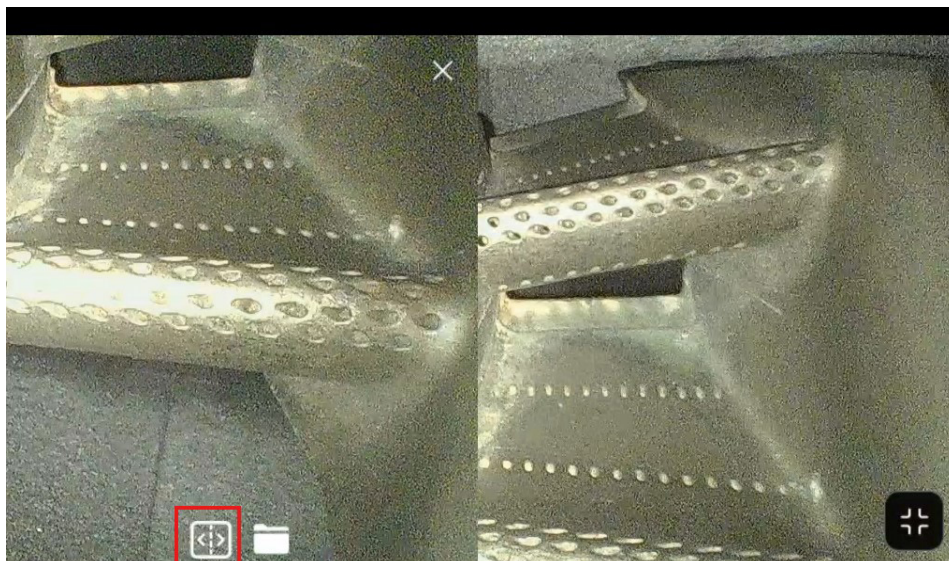


- o Tap the switch icon can switch to another side.




2.4.8 ROTATION

The system provides image rotation in sequence of 90°->180°->270°-0°.
It is useful for recognizing some text or number marks on the inspection surface.

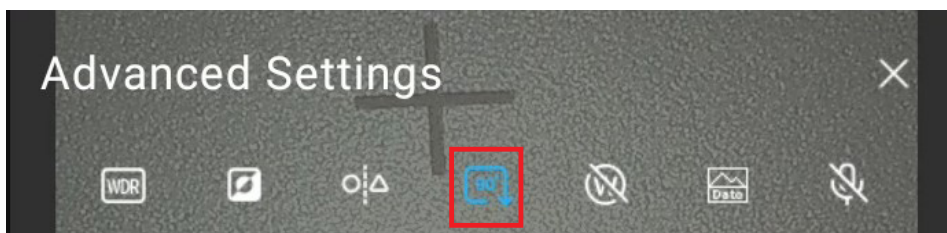

2.4.9 WATERMARK


When enable, there will be watermark as “Mitcorp” printed on the bottom of every saved still image.

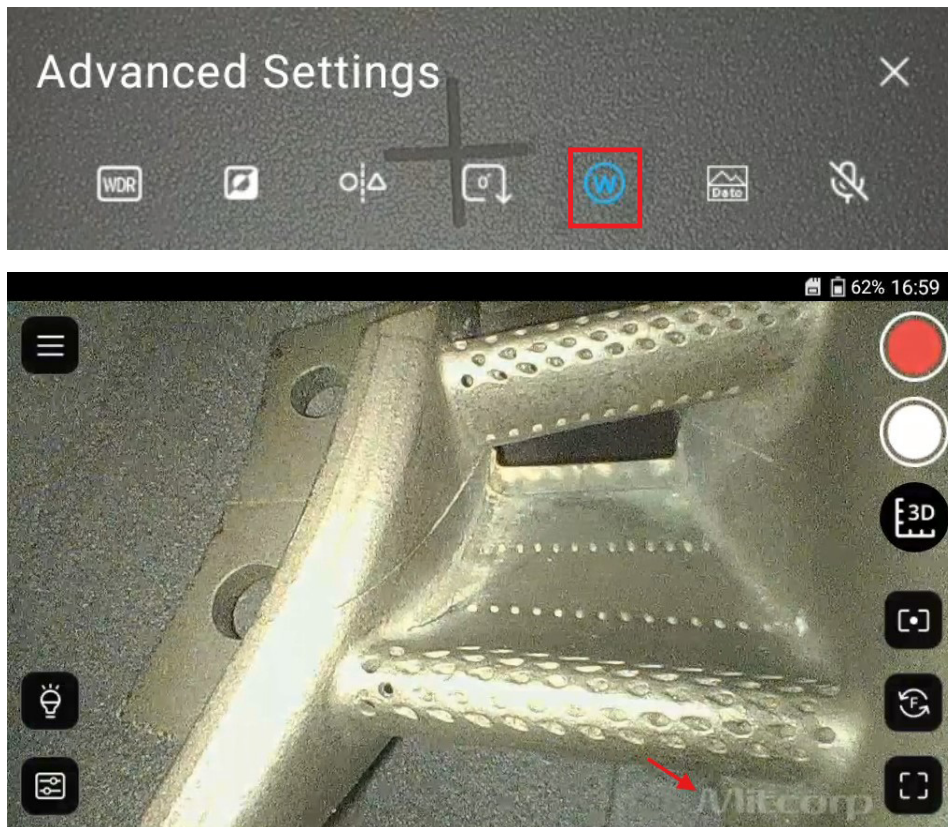

System support input custom water mark logo. (Beyond software version 'MyGO1.1.1')


*Application method:

1. Make your custom logo into a “png” format with transparent background. Name the file as “Watermark_Logo.png”. The picture size must be under 100*100 pixels.
2. Save the png file on the root directory of the inserted micro SD card.
3. Enable the watermark function, the system will load it in internal memory and display it on the screen.
4. To delete the water file: long press the watermark icon till the feedback information pop-up.

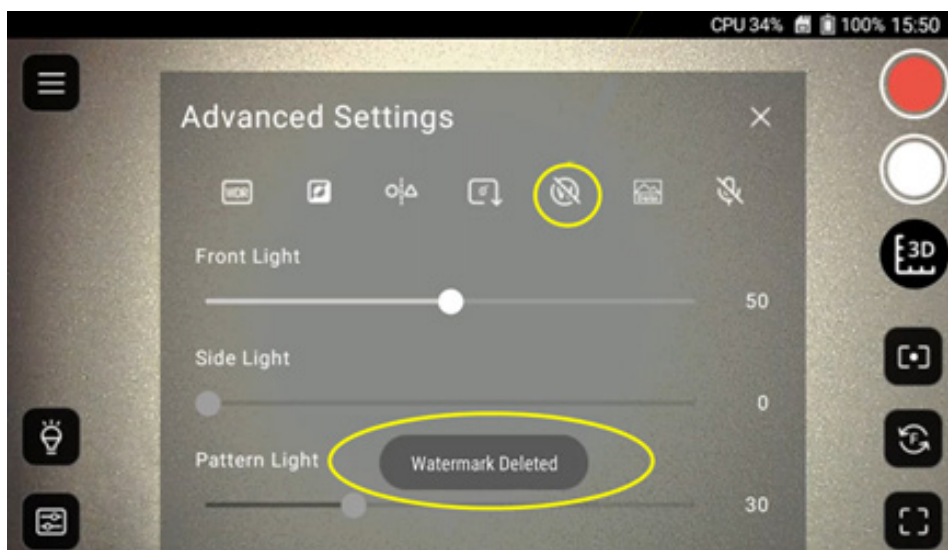


2.4.10 DATE

The system provides "year-month-date" fixed format timestamp on saved image. Tap this icon to enable it.

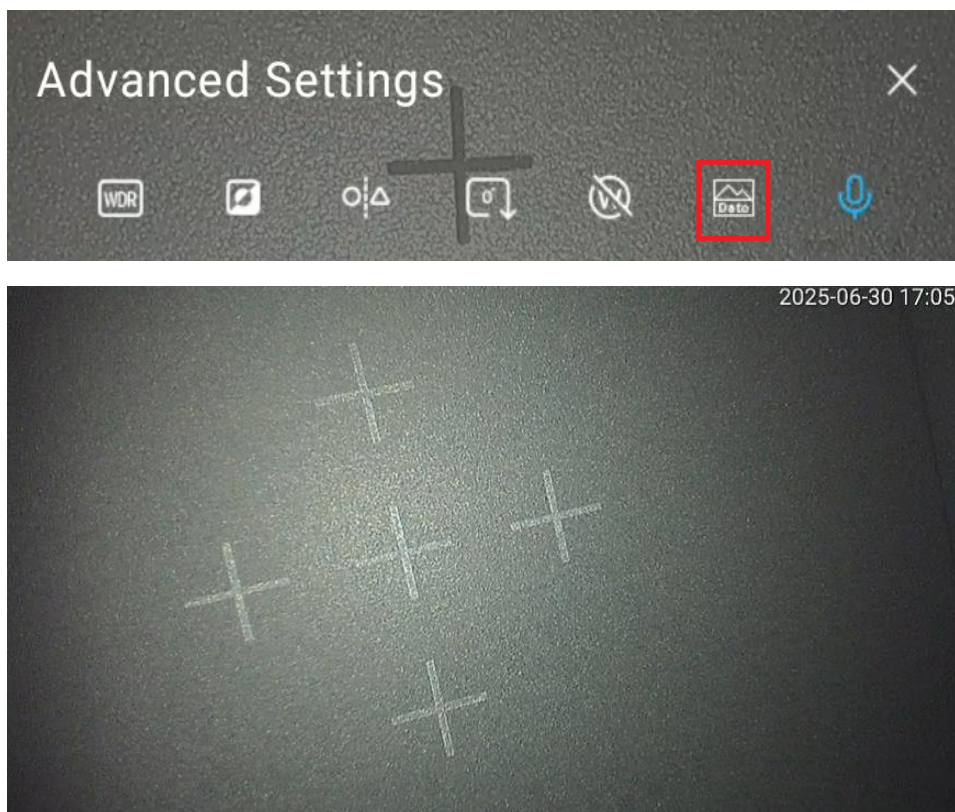

2.4.11 MICROPHONE


The system provides build-in microphone receiver on the monitor for voice annotation when recording. You can turn it off in this setting.

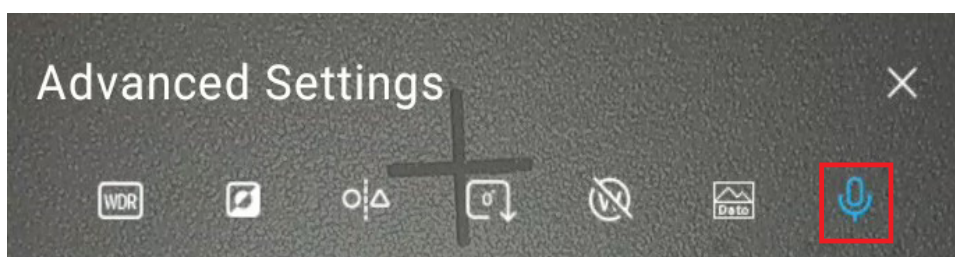

2.4.12 BLADE COUNTER (available above the software version "MYGO v1.3.0")

Insert the camera at the proper position to include the view that covers blade rotation movement and keep the probe include the articulation well fixed.

Short press the hotkey(on the option) and wait for 3 seconds countdown preparation. Then start to do the calibration process.

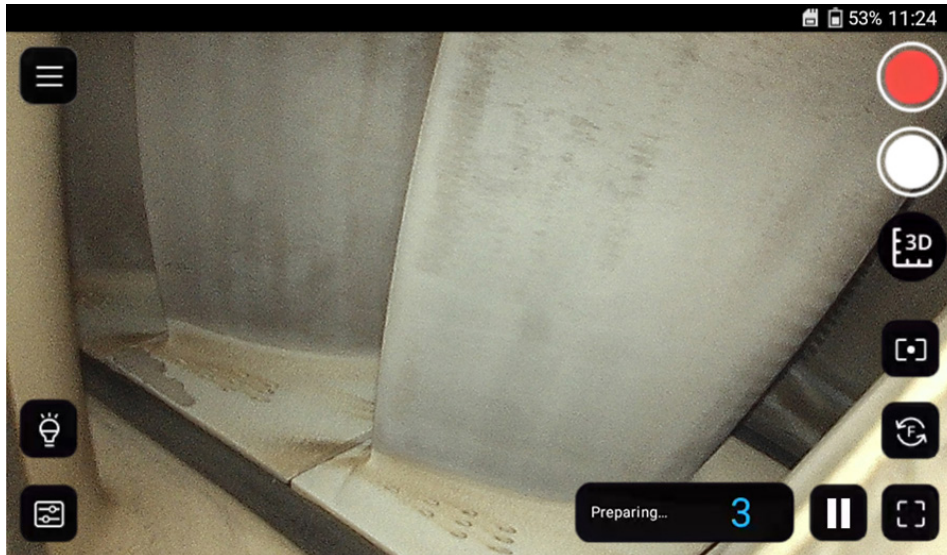

Slowly rotate blades. The system will automatically calibrate using the first two blades.



After calibration, the system will begin blade counting.
The counter counts up when rotating in the calibrated direction, and counts down when rotating in reverse.




Tap pause to inspect specific blade details.
When comes back, system will do a new initial process and continue the counts before pause.



Note:

You can control whether to display and record the counter in video files.

Enter the [Advanced Settings] -> [Video Preference], use the [enable / disable] switch to change the setting.

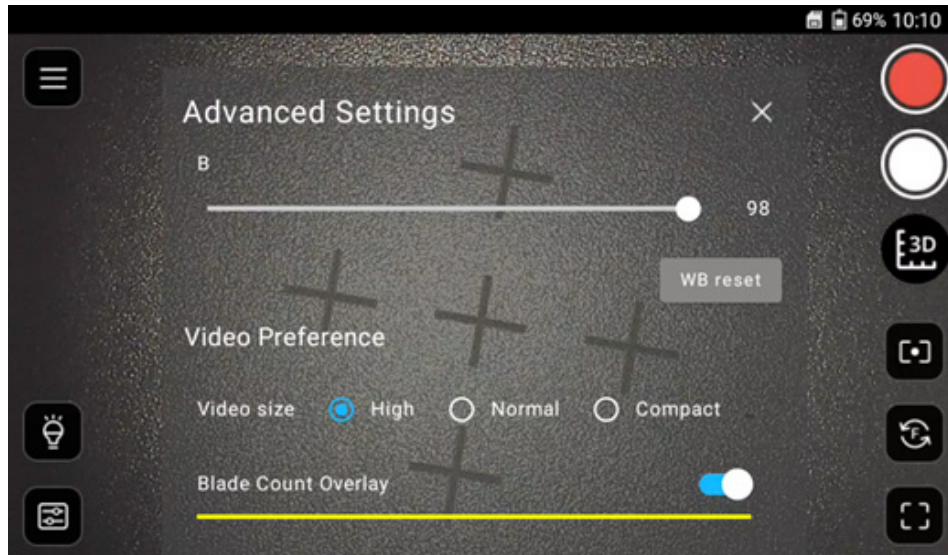

2.5 Full screen

Tap the  button on the bottom of screen to hide or display function buttons on the two sides.



2.6 Switch camera (view angle)



Tap the icon to switch between front and side cameras to get proper target view angle. Note the illumination light source will switch simultaneously and the level control are also individually set. (Refers to [2.4.1])

2.7 Manual Exposure



The system default auto exposure point at center. User can tap any position on screen live view to focus the exposure value, then the focus button on the right side will turn on. Tap the button again to back to default setting.


2.8 Control X3000 on PCs

Screen mirroring software could be used to link and control X3000. Here we take a green software "scrcpy" provided by github for example.

1. Download and unzip your compatible version file folder:
<http://github.com/Genymobile/scrcpy/blob/master/doc/windows.md>

 scrcpy-win64-v3.1

2. Boot up and connect your X3000 to PC via the USB type-C port, and then execute the  program. The software will access the device and automatically pop up the simulation window on PC's screen. The window and base unit's screen is synchronized and you can use mouse click instead on PC operation.
3. To end the linkage, close the PC's operation window first, and then unplug the USB cable from base unit.
4. After first time execution, the software will build a shortcut on desktop for next time application usage.

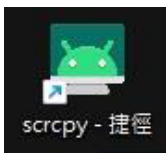

Disclaimer: The github is a green 3rd party application provider. Thus, Mitcorp don not guaranty all the performance when it run on your PC. Uses should rely on that website if any trouble shooting issue occurs.

Part III Measurement Functions


Overview of 3D-measurement system

The system provides 7 measurement functions on the 3D reconstruction images. You can create multiple measurements on each image and the results can be real-time shown on the screen.

						
Point-to- Point (Length)	Point to Line (Distance)	Point-to-Plane (Depth)	Area	Two-lines-angle (Protractor)	Reference Plane	Radius Gauge


3.1 Capture a 3D image

Tap the  icon on the right side of the live view screen. A green light sampling matrix will appear. Follow these three steps to capture a high-quality 3D image:

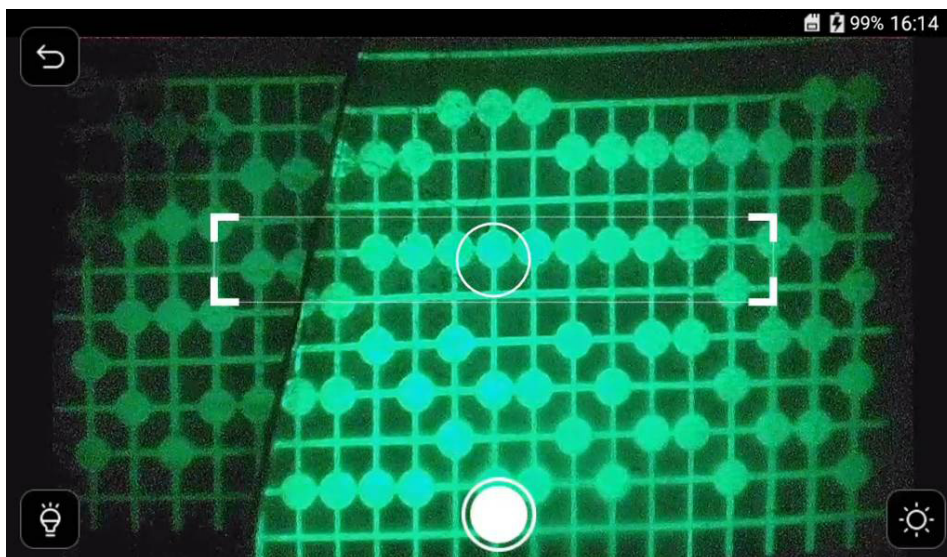

1. **3D Focus:** Carefully adjust the camera's distance to the target surface. Align the fourth green point line so it moves into the center of the white focus circle.
2. **Left Sidebar Adjustment:** Adjust the left sidebar to make most of the green points clearly visible. Avoid overly bright or shiny spots.
3. **Right Sidebar Adjustment:** Adjust the right sidebar to ensure sufficient white light is projected onto the target surface to reveal key features.

Repeat and fine-tune the steps above as needed. Try best to let your target defect and its corresponding surface occupy the main part of the screen. Once ready, tap the white capture button located at the center bottom of the screen. Next step is 'Select Area'. (Ps. This step prompts to skip the unnecessary area and save 3D computing loading from invalid data, then improve the successful 3D reconstruction rate.)

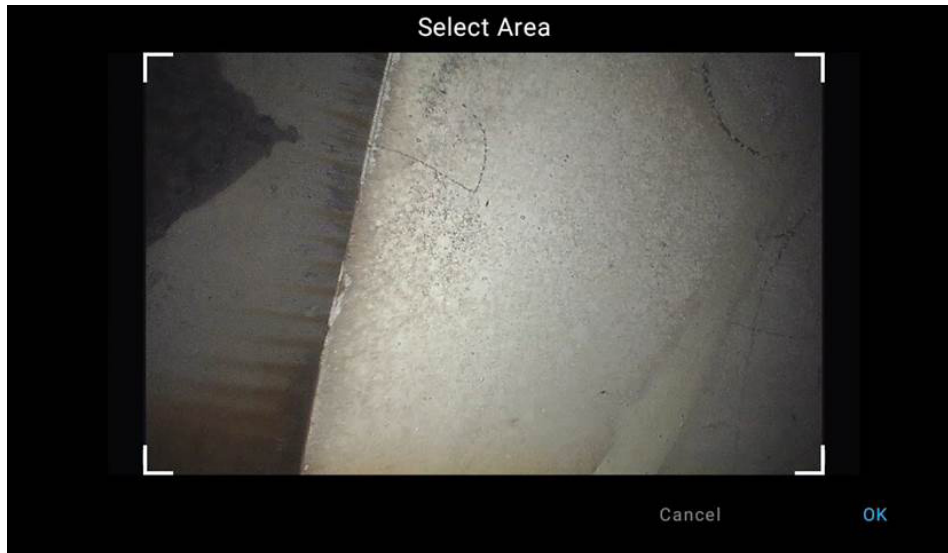


Tap and drag the frame's corner marks to fit the necessary area that covers the most part of target defect and its target area. Then tap 'OK'.




The blue mask shows the preview of area that is prompt to process the next 3D reconstruction. Retry and fine-tune the procedure above to get best result of the blue mask area. Then tap 'OK'.




Wait a few seconds for 3D reconstruction computing.

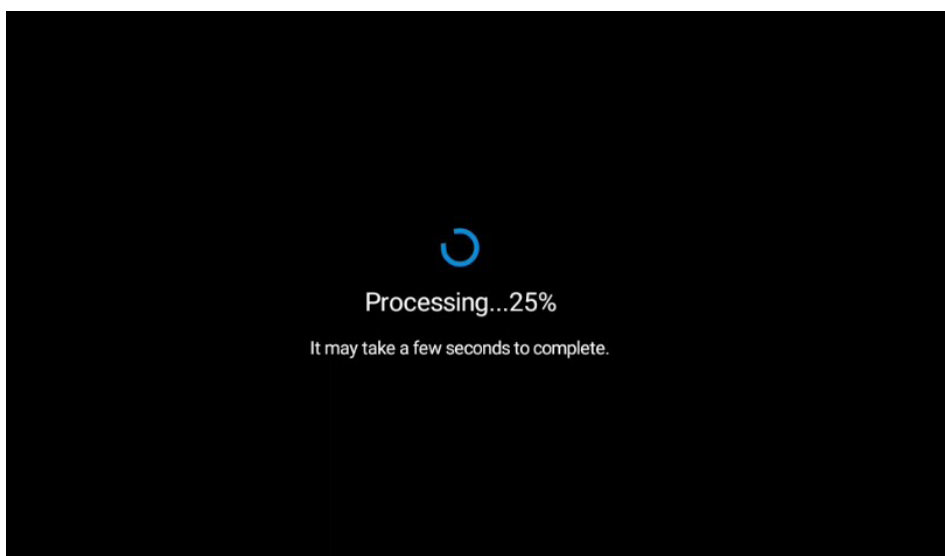


When finishing, the green mask shows the area that been successfully reconstructed into 3D model. If the result is satisfying, save/save and view to access the measurement 3D model UI. If not, cancel and retry the last procedures.

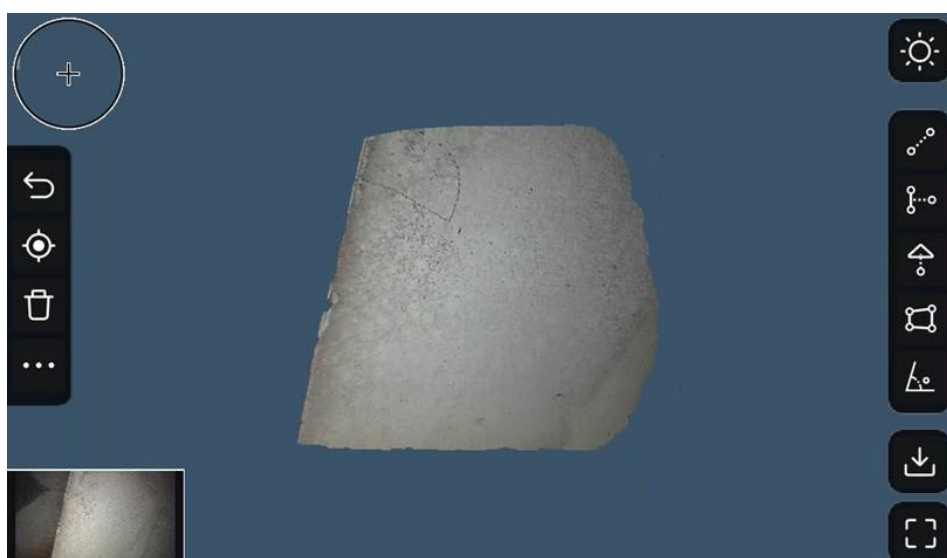

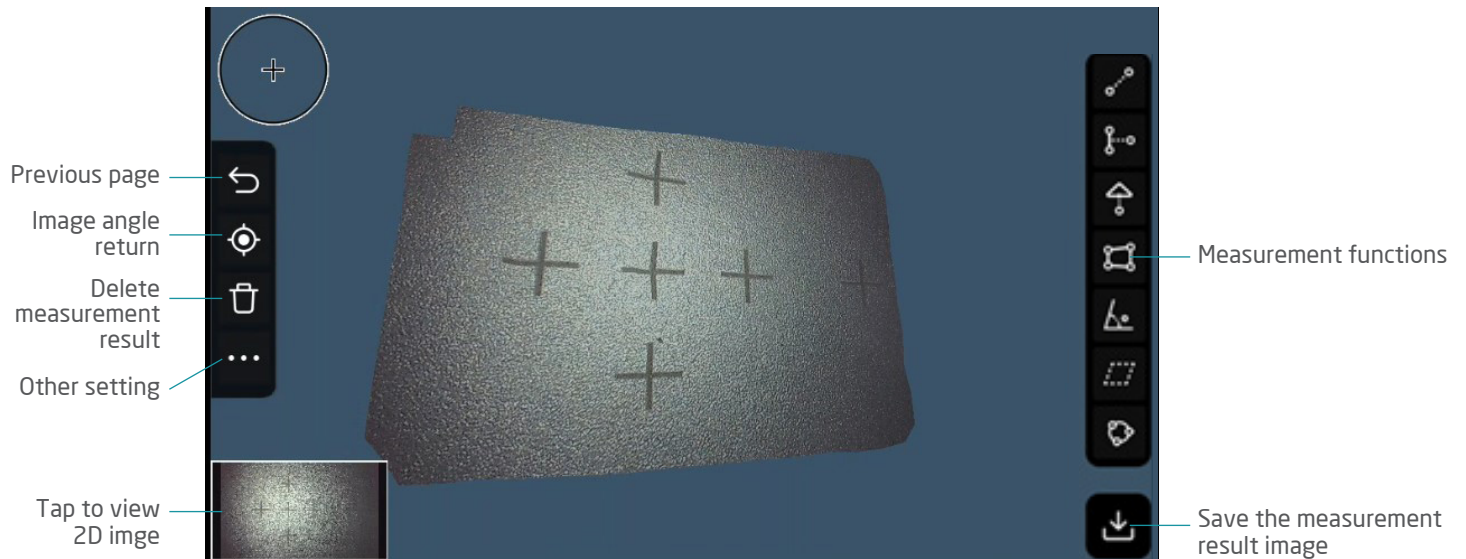

" Other settings:


System provides several display settings under measurement operation mode, including "object brightness", "scene brightness", "measurement unit", and virtual "joystick".

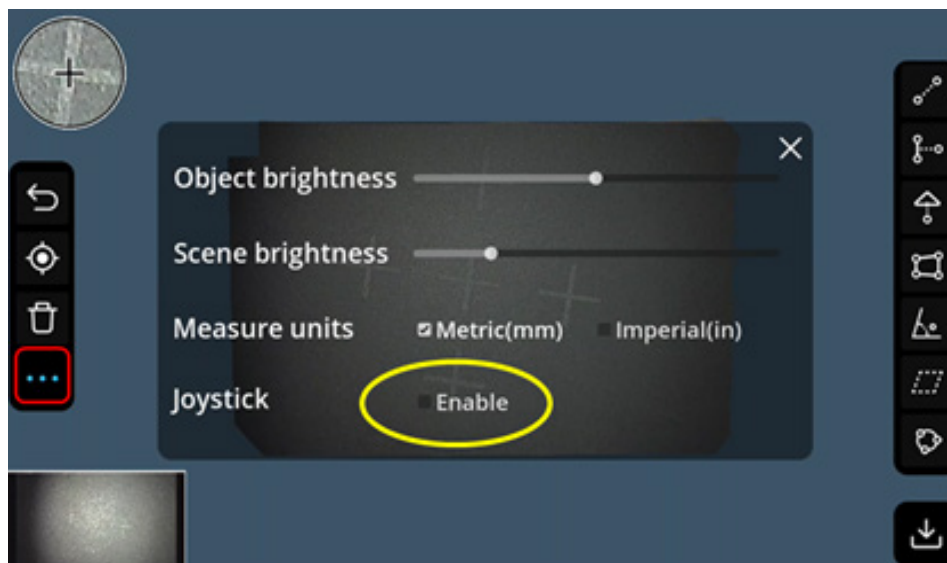

When the "Joystick" is enabled, there shows up a direction plate right down the screen.

3 control methods as follow:

1. press and drag the blue center button to move the cursor.
2. single click the 4 direction arrow to fine move cursor.
3. when the joystick is enabled, you need to single click the blue button to confirm the cursor's position.

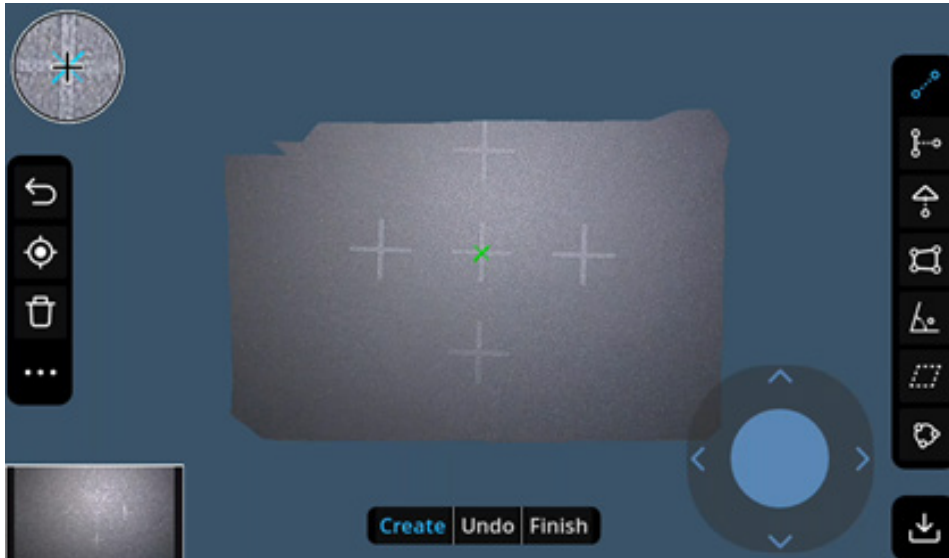


3.2 Measurement Functions

All the measurement functions provide step-by-step operation hints on the up side window. You can easily follow it to complete every measurement.

During putting cursor points, tap and drag and check if it is at the right edge/point by the magnifier up-left on the screen. It is crucial for getting precise result.



After finish, you can tap the down-left window to view check the measurement result shown on the original 2D image (the "Reference Plane" mode don not support the 2D result display).

3.2.1 Point-to- Point (Length)

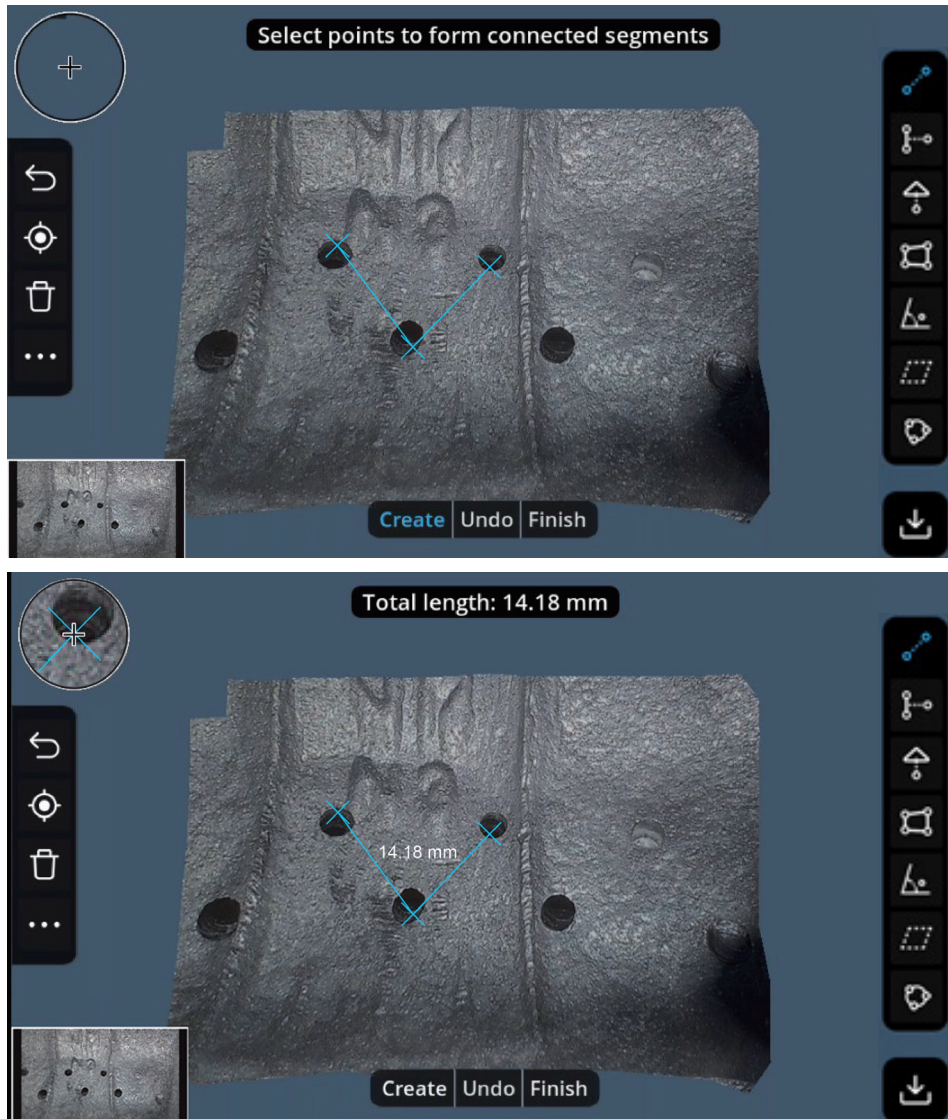


1. Tap the function icon then tap the [Create] button.
2. Set 2 cursor points to measure single line, or multiple continue points to measure curvy line.
3. Use the [Undo] button when put a bad cursor point. Tap the [Finish] button, the result total length shows distance between both points in 'mm' you can change the display unit into inch from the setting menu.

3.2.2 Point-to-Line (Distance)

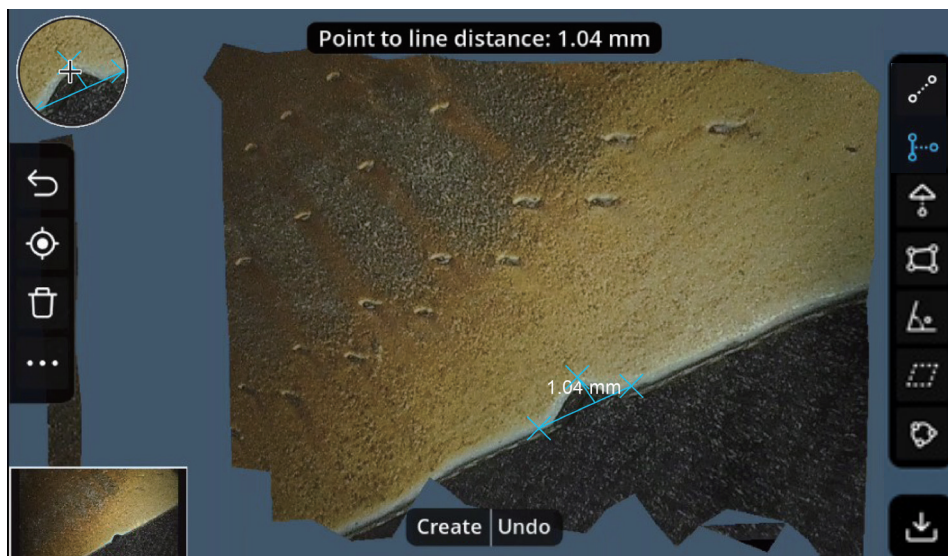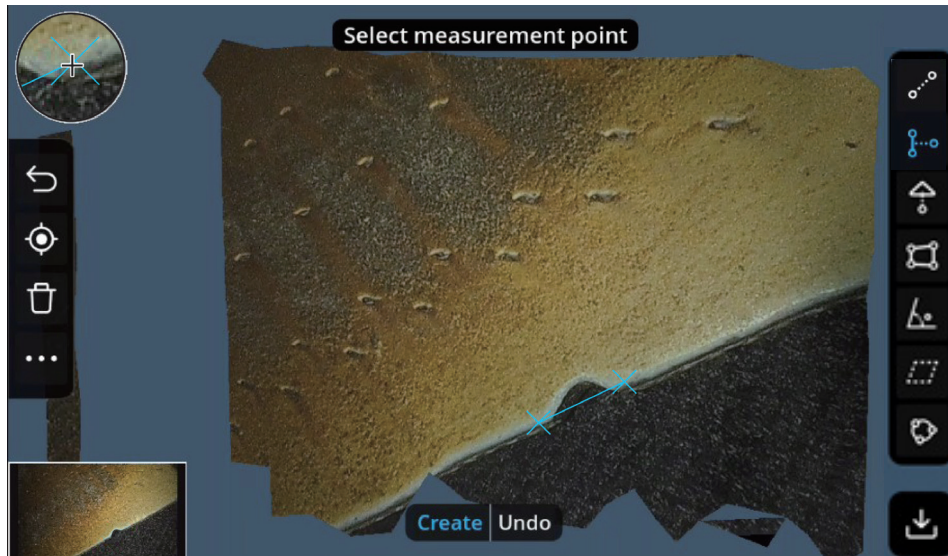

1. Set two points to define the baseline.
2. Set third point to calculate distance between point and line.

3.2.3 Point-to-Plane (Depth)

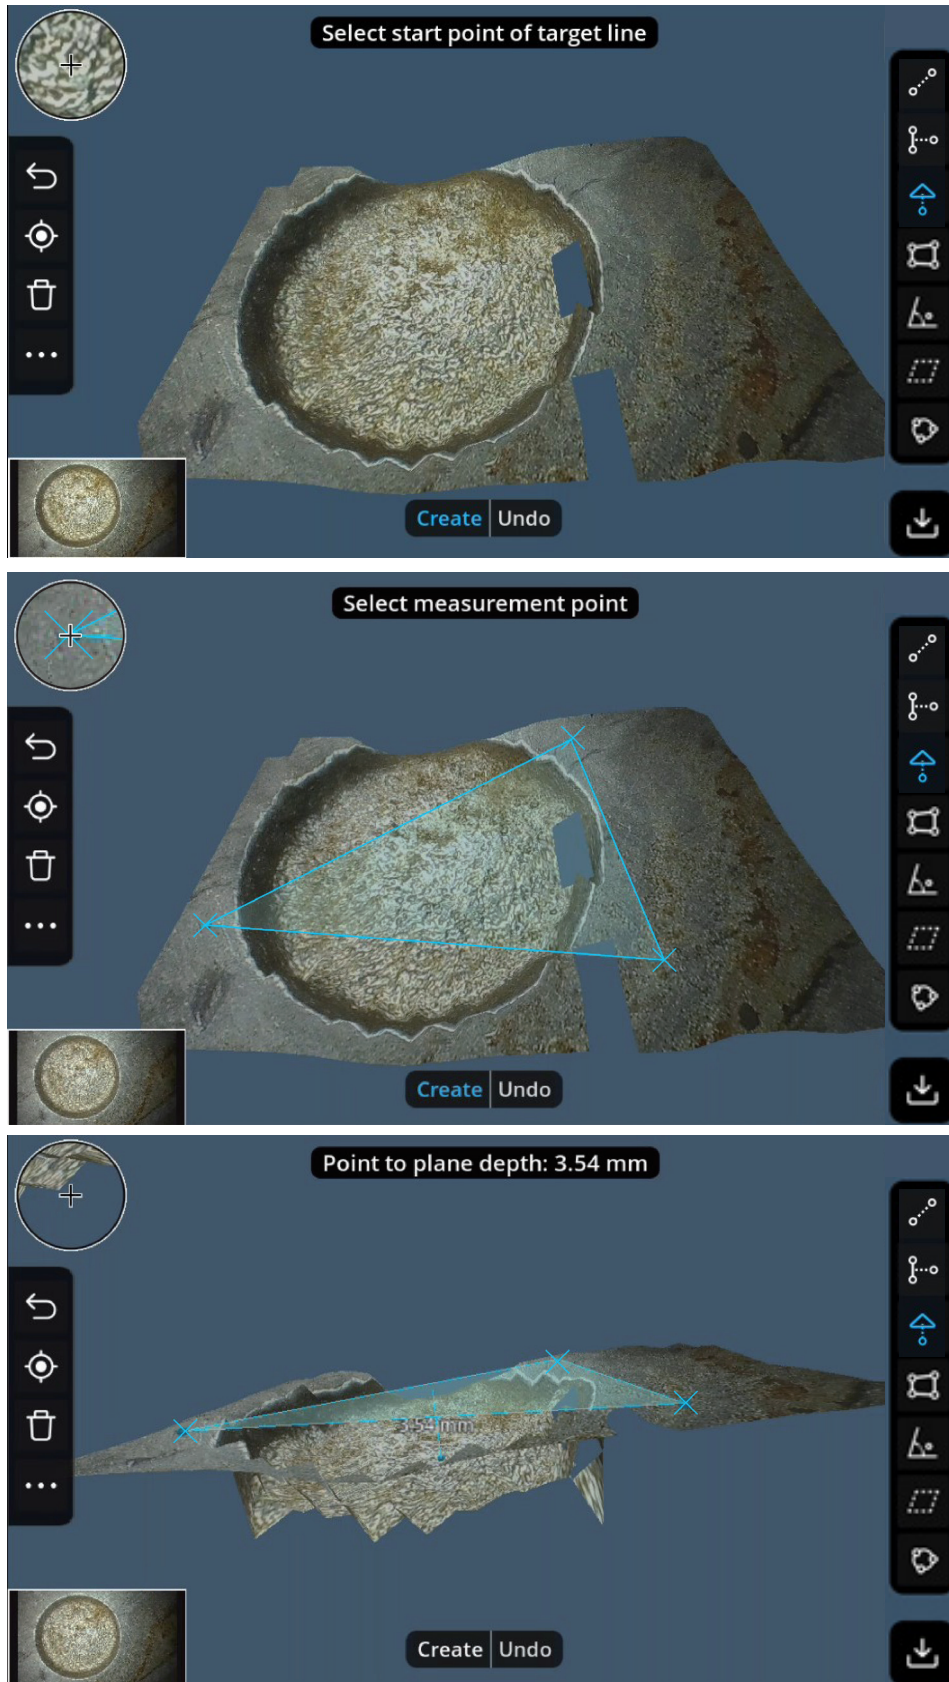

1. Set 3 points to define the reference plane.
2. Set 4th Point as measurement point.
3. Result shows shortest distance between measurement point and reference plane.

3.2.4 Multiple-point-Area



1. Set points to define area contour.
2. Press [Finish] to display the area of the selected region.

3.2.5 Two-lines-angle (Protractor)



- Set the anchor point and two end points to measure the angle.

3.2.6 Reference Plane

This tool is typically used to measurement of a missing corner of a plane surface. Operation step as follow:




1. Put 3 cursors along the missing corner edge. Try to make the 3 points across the range of the edge.



2. A virtual plane will be created to extend measureable point area range of the reconstruction image.




3. Press the "Area" icon to apply a normal multi-point area measurement among the virtual plane range. To clean the measurement result, short press the  once. To erase the reference plane, press the  twice (press again under there is no measurement result on the screen).

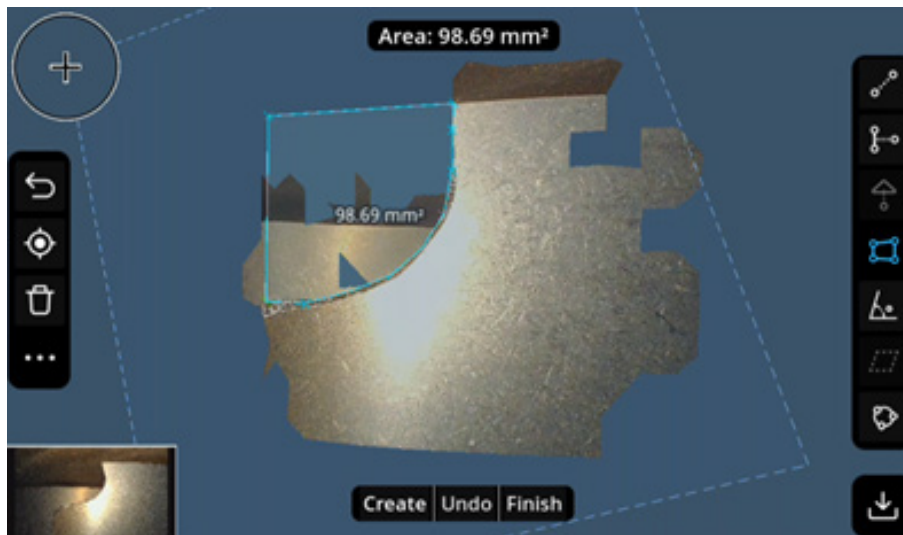


3.2.7 Radius Gauge

This tool can be used as a radius gauge. Put 3 cursors on the target spot's arc line, the radius of the arc will be shown on the result and image directly.

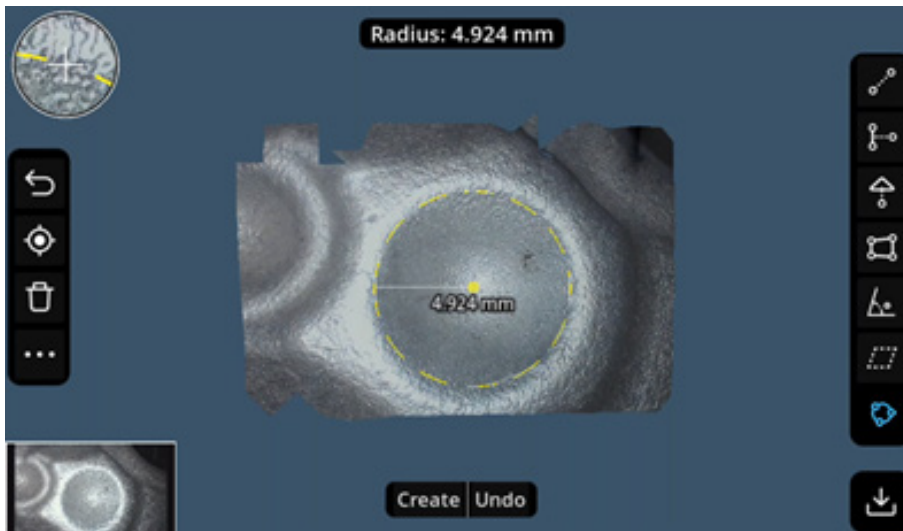


Tap and drag the circumference to change the arc radius. Tap and drag the center to move the whole circle to fit the edge on the target flaw.

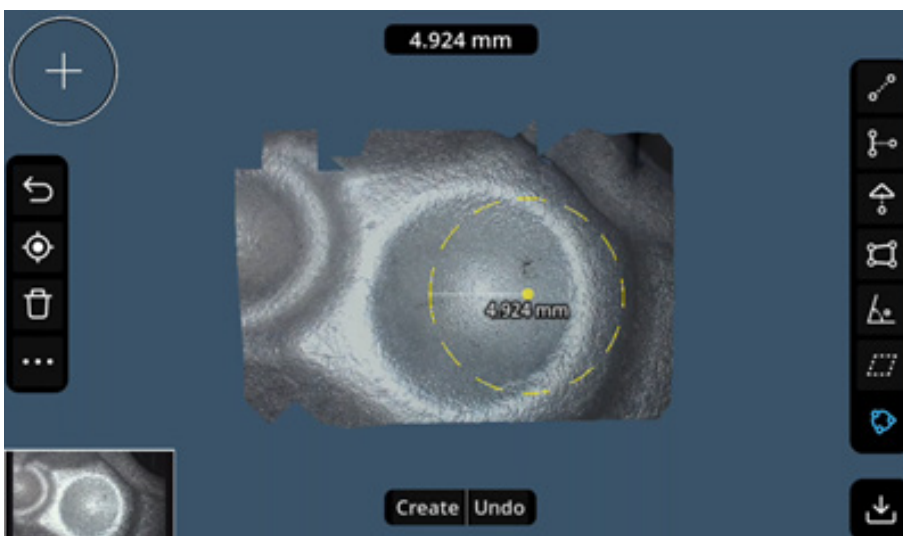


3.3 Calibration

- ◆ Recommend to use calibration block to check accuracy before using every time.
Please do the calibration process as below.

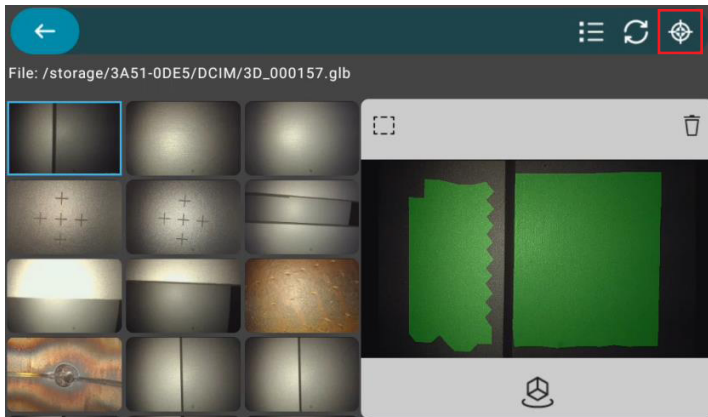


► Step 1.

Enter the  3D measurement interface then find the  button on the up right corner. Tap it to start the calibration process.

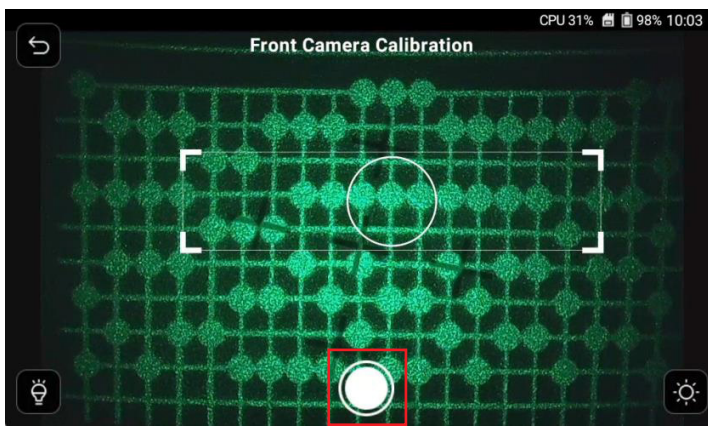


► Step 2.


First, do the front view camera. Insert the probe into the calibration block's "FRONT" hole till it contacts the wall. Then, tap the white 3D capture button.

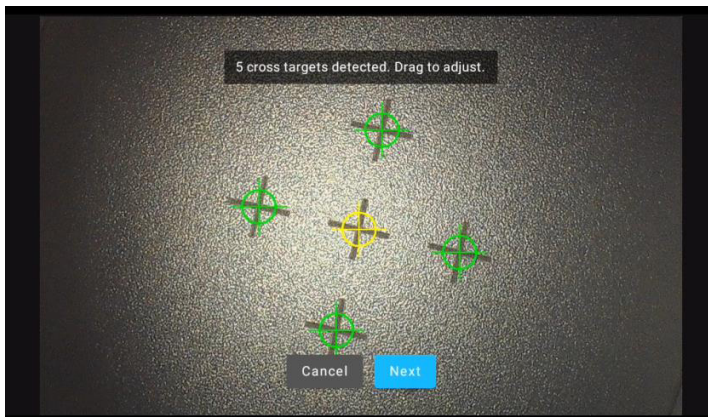

► Step 3.


The system will automatically catch the cross point positions. If some dots are not exactly aimed, drag to adjust them. When all well done, tap 'Next' to access side camera process.

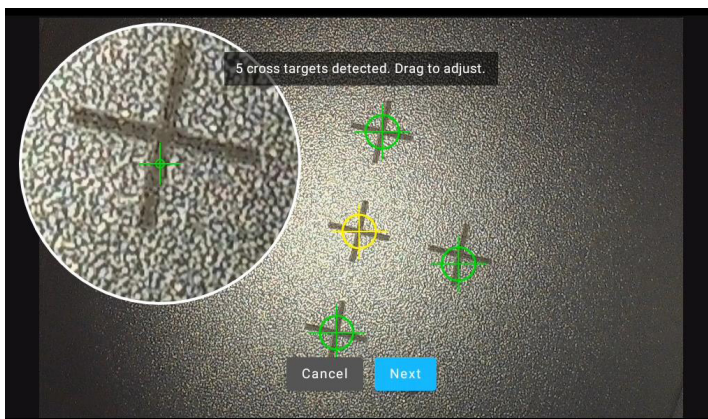

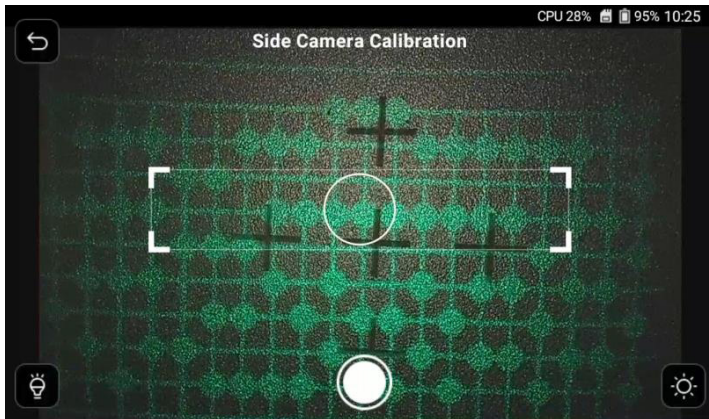

► Step 4.

Switch to insert into the side camera hole then tap the white 3D capture button.

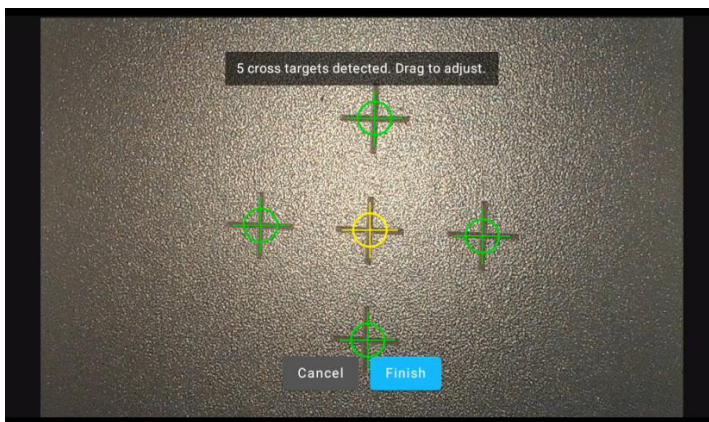

► Step 5.

The system will automatically catch the cross point positions.
Repeat the same process as front view.
Tap the 'Finish' button when all well done.



► Step 6.

The calibration is completed.

Specifications

X3000 Base Unit/Monitor	
Dimension	L:355 W:216 H:214 (mm)
Weight	2200 g
water proof	IP 54
Display	above 7" LCD monitor with full touch panel
I/O Port	Power button
	Micro SD memory card slot
	USB Type-C (data transmission)
	Mini-HDMI (AV Output)
	Reset button (pin push)
Display Extension	HDMI/USB-C to +7" monitor
Tip Temperature warning	Low/Middle/High warning on screen display
Power indicator	0 ~ 100% indicator on screen display
Microphone	Built-in (on/off switch by setting menu)
Memory media	External Micro-SD card. Up to 128 GB
System languages	30 languages with user interface context
Battery	
Dimension	L:125 W:114 H:58 (mm)
Weight	520 g
Charging time	4.7-4.33hrs (2.5A-3A) *Power adaptor: output 45W, 3A
Discharging time	Typical 6 hours operation
LED Indicators	Red: charging / Green: full charged / Flashing: Abnormal
Operating Environment	
System Operating Temperature	-20°C~50°C
Tip Operating Temperature	-20°C~100C in air, 10-30°C in water
Storage Temperature	-20°C~60°C. (If the product is kept for longer than 3 months, It is strongly recommended that the product is preserved at dry and temperature appx.20°C)
Battery Charging Temperature	5°C~40°C
Image functions	
WDR (Wide Dynamic Range)	Software merge 3 pictures in 1
Negative	High contrast film effect
Rotation	90-180-270 degree rotation of the image
Compare	Select any saved image to compare with live view image
Annotation	Text and hand draw remarks on saved image (English letters and symbols)
Watermark	Fixed Mitcorp watermark on image
Tag	Editable preset tag text on still images (English letters and symbols)
Image Adjustment	Sharpness / Contrast / Saturation / White Balance
File Management Functions	
Gallery playback	Grid view / List view / File filter.
Create / edit folder	Editable preset for saving images
Create / edit filename	Editable prefix text for saving images
Package / Accessories	
HDMI cable (AV-out)	1.5 m, HDMI 1.4a,TYPE A to TYPE D (Micro HDMI)
USB cable (data transfer)	1 m, TYPE C to TYPE A
Carry case	Airtight trolley case; Include a set of mono-pod
Micro SD card	Maximum 128G
Battery	DC output 7.26V, 8680mAh*1 sets
DC power adapter	USB PD 45W(DC 15V --- 3A) with Cable
Rigid sleeve	Detachable hand grip (*1 pcs); 45 cm stainless steel extension poles (*2 pcs)
Probe clamp plug	Applicable to insert hole diameter between 20 mm~25 mm. Clamp only for 6 mm series camera probe
Centering Devices (Optional)	O.D.: 18 mm*1, 38 mm*1 65 mm*1

Regulatory	
Basic safety	CE / FCC
EMC	EN55032 / 24 , part 15B(ITE)
Environmental	WEEE / RoHS/REACH / CA65 / Conflict Minerals
Battery	UN38.3 (1.2 m drop / 3 m stacking / test summary) 、PSE 、IEC62133 、BSMI 、CCC
MIL-STD-810H	Method 511.6 Procedure I(Explosive Atmosphere) / Method 514.8 Procedure I(Vibration Test, packaged)/ Method 516.8 Procedure IV(Transit Drop Test, packged)

Insertion Probe 60D4W-FS/FSM	
	
Still Image resolution	Front & Side: 2560*1440
Video record resolution	Front & Side: 1920*1080
View angle	Front (0°) + Side (90°)
Tip length	25 mm
Tip Construction	Stainless steel housing. Front + Side 2 pairs: camera / light source / micro projector integrated packing
Outside Diameter (OD)	6.0 mm
Probe Length	3 m / 3.5 m
Probe Construction	Tungsten steel out-braid
Field of View (FOV)	95° ±5%
Depth of Field (DOF)	10 mm~∞
Illumination light source	Front: Fiber + backend LED. Side: LED on tip
Temperature resistant	Up to 100°C
*3D Measurement Software Activation	Optional
Articulation	Full way mechanic joystick with lock button
*Neck bending angle	≥ 130°
Console Function Buttons	Trigger: snapshot / freeze / record; Round button: bright+ / bright- / custom hotkey
Water proof	Camera tip: IP67; Scope console: IP54

* The articulation bending angle will decrease up to operation time and frequency conditions.

*3D Measurement (Optional - Software Activation)	
Functions	Point to Point (Distance)
	Point to Line (Distance)
	Point to Plane (Depth)
	Multi-point line (Length)
	Multi-point area (Area)
	Two-lines-angle (Protractor)
	Reference Plane
	Radius Gauge
Object distance	10~40 mm

Mitcorp

T +886-3-328-7177 F +886-3-328-7176

✉ e-mail: sales@mitcorp.com.tw
@ website: www.mitcorp.com.tw

©2026 Medical Intubation Technology Corporation (Mitcorp).

All rights reserved. Design and specifications are subject to change without prior notice. Actual product and accessories may differ from illustrations. Errors and omissions excepted. Reproduction in any manner without written permission of Mitcorp is strictly forbidden.